

EWIKON



pro CONTROL

Hot runner controllers

Operating manual



1	Introduction.....	5
1.1	Symbols used	5
1.2	Notations.....	5
2	Safety instructions.....	5
2.1	Intended use	5
2.2	Information for operators and users	5
3	Structure and functionality	6
3.1	General information	6
3.2	Structure	6
3.2.1	Display (1)	8
3.2.2	LED strip (3).....	8
3.2.3	Power boards (13).....	9
3.2.4	Connections	9
3.3	Identification on the controller	10
3.3.1	Wiring of the plug systems.....	10
4	Commissioning	11
4.1	Electrical connection	11
4.1.1	Mains power supply	11
4.1.2	Mains connection	11
4.1.3	Connection of the mould	11
4.2	Operating and display concept.....	12
4.2.1	Main switch.....	12
4.2.2	Status display.....	12
4.2.3	Operation.....	12
5	Start menu.....	13
5.1	Navigation bar.....	14
5.2	Selection of zones and groups for configuring	15
5.3	Navigation menu.....	16
5.3.1	Setup.....	17
5.3.2	Operation.....	28
5.3.3	Settings	44
5.4	Index.....	58
5.5	Switch all outputs on and off.....	58
5.6	Standby operation	59

6	Technical data.....	60
7	Dimensions.....	61
7.1	12 zone controller.....	61
7.2	24 zone controller.....	61
7.3	36 zone controller.....	62
7.4	120 zone controller.....	63
8	Appendix.....	64
8.1	Terminal bridges for the star-delta supply.....	64
8.1.1	Terminal bridges in star supply network (status as delivered).....	64
8.1.2	Terminal bridges in delta supply network.....	64
8.2	Pin assignment alarm socket.....	65
8.3	Pin assignment digital inputs.....	65
8.4	Pin assignment RS485.....	65
9	Index.....	66

Figure 1 - Housing front.....	7
Figure 2 - Housing rear	7
Figure 3 - Housing side view	8
Figure 4 - Type plate.....	10
Figure 5 – Example EWIKON standard (according to DIN EN 16765-A).....	10
Figure 6 - Start screen.....	13
Figure 7 - Navigation bar.....	14
Figure 8 - Sample page for entering setpoint values.....	15
Figure 9 - Example of the scrollbar with mini view.....	16
Figure 10 - Navigation menu	17
Figure 11 - Setup.....	17
Figure 12 - Operation.....	28
Figure 13 - Example of a zone display	30
Figure 14 - Settings.....	44
Figure 15 - Star supply.....	64
Figure 16 – Delta supply	64


1 Introduction

1.1 Symbols used


	Caution/Warning	Information on possible damage to property or personal injury
	Information	Important information

1.2 Notations

Menu structures between words are indicated by the > symbol and depicted in the same way on the device.

Interaction with the operator is denoted by the finger symbol. 

2 Safety instructions

	Please read this document completely and carefully before commissioning or operating the device.
--	--

2.1 Intended use

The hot runner controller is used to control the temperature of heating circuits and is designed for use under precisely defined conditions, such as supply voltage and temperature. The operator must therefore ensure that the controller is only used under operating conditions that comply with the technical data. The manufacturer is not liable for damage resulting from non-compliance with the intended use.

The hot runner controller is not suitable for use beyond the limits defined in the technical data and during its design. In addition, the use of spare parts from third parties and the implementation of non-described maintenance activities constitute failure to comply with the intended use.

Alterations, conversions and other modifications are made exclusively at the operator's own risk and could pose safety hazards. The manufacturer and distributor of this device cannot be held liable for direct and indirect damage resulting from improper handling or treatment.

2.2 Information for operators and users

The controllers are operated on the low-voltage network. The relevant safety regulations must be observed when connecting up the controller and performing maintenance on it. In addition, the local and general safety regulations must be observed for its installation and operation. The operator is responsible for compliance with these regulations. The operator must additionally make this documentation available to the user and provide instruction in the correct operation of the device. The user must be familiar with this documentation. In order to ensure reliable and safe operation, the individual user is required to observe the information and warnings.

The controllers may only be brought into operation by authorized specialist personnel. Under the terms of these operating instructions, specialist personnel are persons who can recognise

and assess the dangers associated with the work entrusted to them on the basis of their specialist training, their experience and their knowledge of standards.

The device is checked carefully prior to delivery and has passed the tests specified in the test plan for its production, in conformity with the manufacturer's valid quality guidelines. To prevent any damage to the controller, it must be transported and stored in the correct manner. Further safety-related notices are marked in the individual sections of this documentation.

3 Structure and functionality

3.1 General information

The pro CONTROL hot runner controllers are especially suitable for the temperature control of hot runner systems in injection moulds. In use, the controllers are connected directly to the mould via cables.

During operation, the hot runner controllers deliver electric current to the heating units of a hot runner system. The so-called heating current leads to an adjustable temperature increase in the heating units and hence in the mould. Continuous temperature monitoring takes place in parallel via connected thermocouples. In the event of deviations between the actual temperature recorded and the temperature set on the hot runner controller, the heating current is automatically adjusted until the two temperatures are identical.

The controllers are available in different variants. These differ solely in terms of the number of control circuits that are possible – which are also referred to as heating zones. Depending on the variant, hot runner controllers are available with either 6, 12, 18, 24, 30 or 36 heating zones in a table top housing or with 36 – 120 heating zones in a tower housing.

3.2 Structure

A 12-zone controller is shown by way of example in the figures that follow. All the designated components are identical on controllers with more than 12 heating zones.

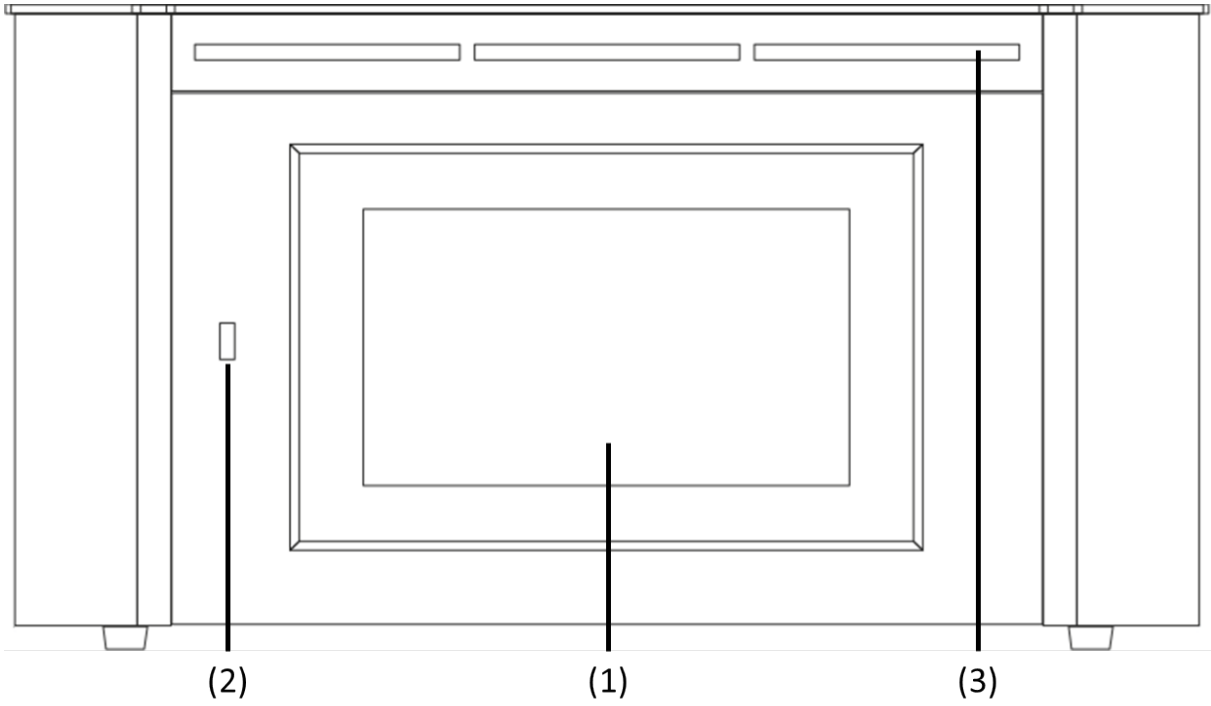


Figure 1 - Housing front

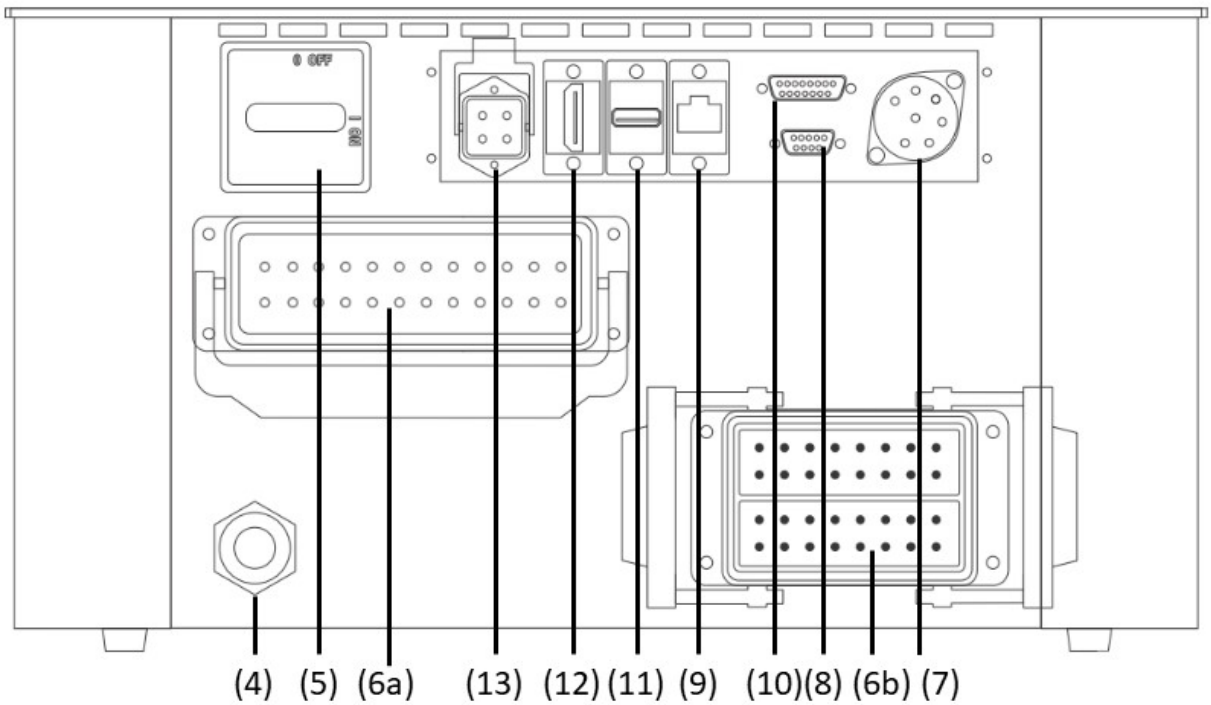


Figure 2 - Housing rear

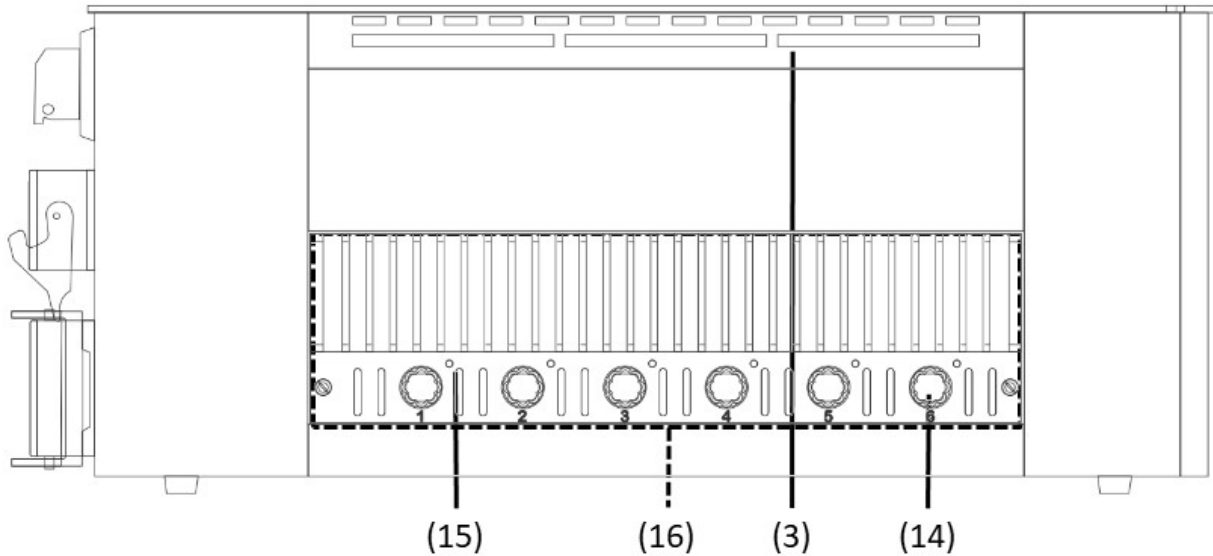



Figure 3 - Housing side view

The following overview describes the main components of the hot runner controller.

- | | | |
|---------------------------------|------------------------------------|--------------------------------|
| (1) Touch display | (2) USB connection | (3) LED strip |
| (4) Connection line | (5) Main switch | (6a) Heater output |
| (6b) Thermocouple input | (7) Alarm socket | (8) RS485 connection |
| (9) Ethernet connection | (10) Digital input | (11) USB port external monitor |
| (12) HDMI port external monitor | (13) Power supply external monitor | (14) Fuse |
| (15) Status LED | (16) Power unit | |

3.2.1 Display (1)

The touch display reacts to finger pressure or can be operated with standard commercial pens that have a rounded plastic tip. For optimum operation, the display can be adjusted to four different positions. This allows an ideal reading and operating angle to be obtained.

	<p>Please note: sharp, pointed objects can damage the display.</p>
---	--

3.2.2 LED strip (3)

The controller status is depicted in colour in an LED strip that is visible from a long way off. This permits a rapid assessment of the current controller and mould status.

3.2.3 Power boards (13)

The connected heating units are controlled via compact power boards, as is the temperature measurement of the thermocouples. Each power board contains the electronics for heating and measuring six heating zones. The individual boards are mounted at the side of the housing. The heatsink visible from the outside is used for optimum heat elimination and thus increases the service life of the installed electronics. The fuses for the load outputs (14) are located beneath the heatsink.

Each zone is switched off separately via relays on the power board so that individual zones can be switched off individually, and seamless production is always guaranteed.

In addition to the fuse for the load outputs, each power board (16) contains an internal second fuse that is necessary for operation in triangular supply networks. There is also a control fuse on the internal wiring terminals.

3.2.4 Connections

In addition to the tiltable display, the front of the housing also has a USB connection. All the other connections are on the rear of the housing. Apart from the thermal and load connections, each controller has alarm contacts, digital inputs and an Ethernet connection.

3.2.4.1 USB connection (2)

The USB connection makes it possible to save and load controller settings, export service files and also update the controller firmware via a flash drive.

3.2.4.2 Ethernet connection (9)

The Ethernet connection is used for communication with additional controllers or an injection moulding machine and is located on the rear of the housing.

3.2.4.3 RS485 connection (8)

The RS485 interface is used for communication with injection molding machines and is located on the rear side of the housing on a 9-pin D-SUB socket. Further information regarding this interface can be found in chapter 8.4.

3.2.4.4 Notification contacts (7)

Each controller has three potential-free alarm contacts that are fed out via a socket on the rear of the housing. By default the alarm contacts open as soon as the controller issues a warning or an alarm. A list of the possible messages is given in Chapter 5.3.2.2.4. A wiring diagram of the alarm contact socket is shown in Chapter 8.2.

3.2.4.5 Digital inputs (10)

The controller evaluates 24V DC signals via a 15-pole D-SUB input. The digital inputs are used for the external activation of functions such as standby or locking the outputs. Chapter 8.3 shows the assignment plan for the digital inputs with the corresponding functions.

The digital inputs are PLC compatible, i.e. they operate over a voltage range of 13...30 VDC with a typical current consumption of approx. 8.5 mA.

3.2.4.6 External touch monitor connection (11), (12) and (13)

Optionally, an external touch monitor can be connected via the connection sockets on the back of the housing. Besides the additional monitor, the connection cable 60070.047-V05 (alternatively 60070.047-V01 or 60070.047-V10) is required.

3.3 Identification on the controller

The type plate is mounted on the side of the controller housing. It contains the type designation with the number of zones, the electrical connection data and the manufacturer's data.

Typ / Type		pro CONTROL 6		
S/N	20091	Prod. KW / CW	30 / 2019	
Code	E7H1-AKB4-C1Z6-87A			
Versorgung / Supply	<ul style="list-style-type: none"> ● Y 230/400 VAC 50/60 Hz ○ Δ 115/230 VAC 50/60 Hz 			
Belastung / Load	3x 16 A			
Schutzart / IP Class	IP20			
Temp. Fühler / Sensor	Fe-CuNi Type J			
EWIKON		Made in Germany		CE
Alarmbuchse / Alarm Socket				
Pin 1+3	Relay 1	Sammelwarnung / collective warning		
Pin 4+5	Relay 2	Sammelalarm / collective alarm		
Pin 2+6	Relay 3			

Figure 4 - Type plate

3.3.1 Wiring of the plug systems


The plugs for connecting the temperature sensors and heating elements to a hot runner are available on the rear of the controller. The customer-specific wiring plan for the plug systems is located on the side of the controller housing (see Figure 5 for an example).

Zone	Load	X1	Sensor X2	
	230 V	~	+	-
1	1	13	1	9
2	2	14	2	10
3	3	15	3	11
4	4	16	4	12
5	5	17	5	13
6	6	18	6	14
7	7	19	7	15
8	8	20	8	16
9	9	21	17	25
10	10	22	18	26
11	11	23	19	27
12	12	24	20	28

Figure 5 – Example EWIKON standard (according to DIN EN 16765-A)

4 Commissioning

4.1 Electrical connection

	<p>Important! Before the device is connected to the supply voltage, a check must first be performed to ensure that the mains electricity conditions comply with the specifications on the type plate.</p>
	<p>The electrical connections must be performed by a qualified electrician. Commissioning and operation while the controller is running are only to be carried out by authorised qualified personnel!</p>
	<p>Switching off all the outputs or individual zones will not protect any of the outputs against hazardous voltages. Before working on the connected heating elements, the associated connections must be unplugged, or the entire device disconnected from the mains power.</p>
	<p>Before the device is opened, it must be disconnected from the mains power!</p>

4.1.1 Mains power supply



Before connecting the device to the supply voltage, a check must be conducted to ensure that the mains electricity system is correct. The hot runner controllers are prepared by default for operation in a star network (3x400VAC + N + PE) but can also be operated in a triangular network (3x230VAC + PE). For operation in a triangular network without a neutral conductor, it is essential to follow the local regulations for the installation of electrical systems. The terminals in the controller must be bridged accordingly for use in a star or triangular network. Annex 8.1 contains a clear terminal connection diagram.

4.1.2 Mains connection

To ensure correct operation, the hot-runner controller is connected to the low-voltage mains by using the connecting cable connected to the unit.

4.1.3 Connection of the mould

To connect the individual control zones to the corresponding injection mould, use must be made of appropriate leads for the sensor and heating unit connection.

	<p>Please note: it must always be ensured that the internal wiring, the wiring of the cable set and the wiring in the mould are suitably coordinated with each other.</p>
	<p>Important! To exclude any effects of potential shifts, the injection moulds that are connected up must be properly earthed in all cases.</p>

4.2 Operating and display concept

4.2.1 Main switch



The main switch is located on the rear of the housing. The switch must be activated to switch the controller on and off.

4.2.2 Status display

The controller status is indicated on a circulating LED strip. In normal operating mode, this display will be green. In the event of a warning or an alarm, the display will change to yellow or red (traffic light system).

4.2.3 Operation

The hot runner controller is operated exclusively via the integral 7" or 10" touch display (Figure 1) on the housing front or via the external monitor.



Please note: The heatsink can become hot during heating. Avoid touching the heatsink!

5 Start menu

A few seconds after the controller has been switched on, the start menu of the user interface appears. In addition to selecting the user language, the most important areas of the controller can be accessed from here.

Quick start

The main settings for bringing a new mould into operation.

Start with saved settings

Start the heating process with the saved settings.

Start with a recipe

Load controller settings that have previously been saved as a recipe.

If the user does not choose anything at this point, the controller will automatically start with saved settings after 30 seconds.

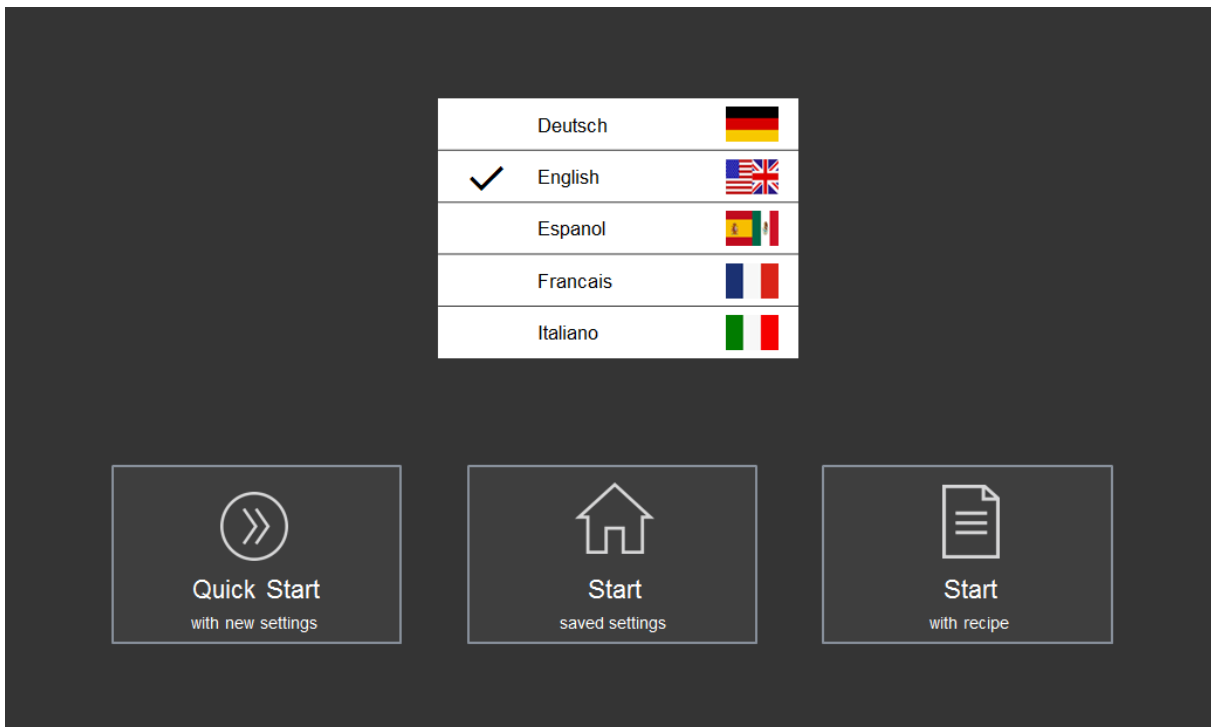


Figure 6 - Start screen









5.1 Navigation bar

The navigation bar is always visible at the top of the screen and contains the most important control elements for the controller.



Figure 7 - Navigation bar

Description of the control elements in the navigation bar

Symbol	Brief description	Explanation
	Show and hide the navigation menu	The navigation menu groups all the settings and display options for the controller in its three main areas: setup, operation and settings.
	Show and hide the index of keywords	The keyword index is an alphabetically arranged list of all the functions including the possibility to directly navigate to the respective settings screens.
	Display of the main view	The main view during normal operation provides a zone overview with the most important information at a glance.
	Switch all outputs on and off	Once all the zone settings have been made, this button releases all the control outputs. The button must be pressed at length so as to avoid unintentional operating errors.
	Switch all outputs on and off	Pressing this button switches off all the control outputs. The button must be pressed at length in order to avoid unintentional operating errors.
	Switch Standby on	
	Switch Standby off	Press this button to switch off standby mode.

	Diagnosis	This symbol is only visible if faults have occurred. When pressed, it opens the fault overview with the fault handling.
	User level	The symbol indicates that the lowest user level without a password is currently active (by default display only). Once a higher user level has been released by entering the corresponding password, the following symbol will appear instead:
	Timer	This symbol is only visible if the heating timer is activated and the device is switched on or off at the programmed time.
xxxx.rzp	Recipe file	Name of the last recipe loaded. If values have been changed after activation of the recipe, an * is added to the name.

5.2 Selection of zones and groups for configuring

The page for configuring zone is divided in two parts. The left side of the screen always shows the zone or zone groups that are to be selected. The actual input is then made on the right side.

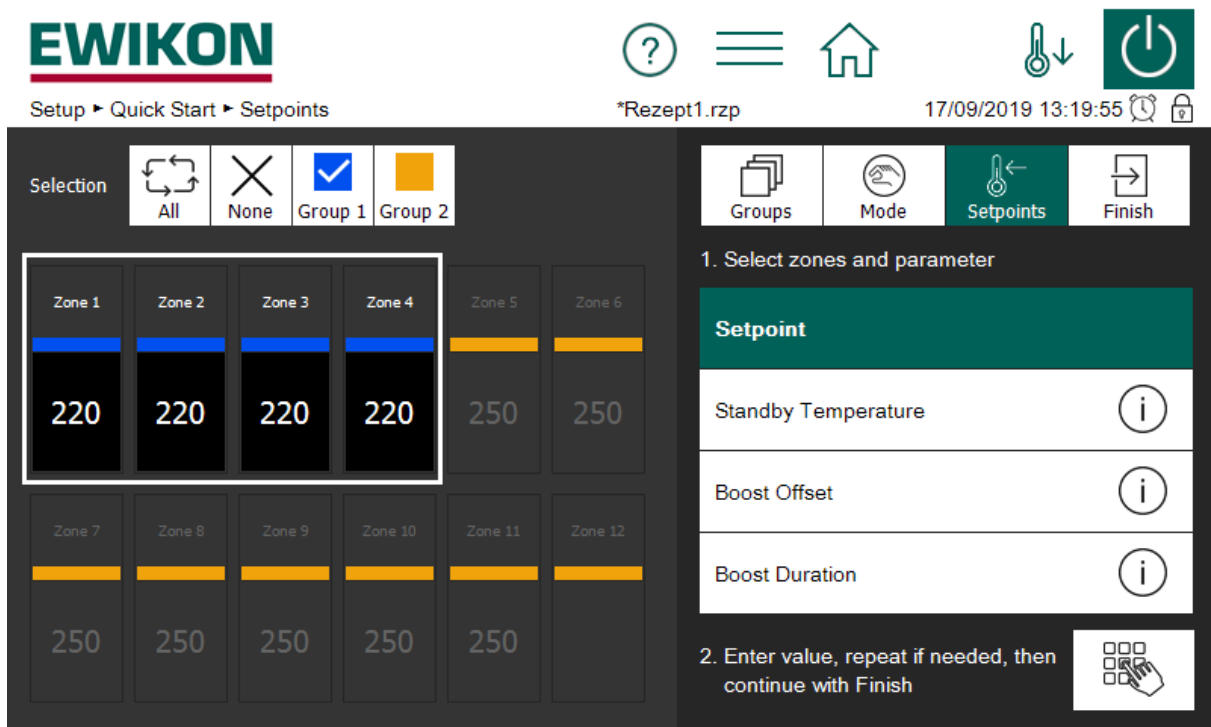


Figure 8 - Sample page for entering setpoint values

Before zones are operated, they must first be selected. This is done by clicking on the desired zone. A selected zone is framed in white. A selected zone can be deselected by clicking on it

again (toggle function). The fast selection of several zones is possible by wiping them with the finger without removing. Note that this view displays up to 24 zones at once. Controller with more zones allow scrolling by swiping the zone display up or down.

Zones can be allocated to a freely named group. Zones that belong to a group display their group color under the zone name. To select an entire group of zones, click on the respective group button (above the zone display). To select/deselect all the zones, click on the “All” (/“None”) button. Operation of the zones is performed on the right side.

If the number of zones is greater than the maximum number that can be displayed on one page, scrolling is required. For an easy overview the scrollbar has a mini display that shows marked zones and messages. As shown in Figure 9, each zone row has 2 rectangular check boxes. If zones in a row have been selected (marked), the left checkbox is displayed in white. The right checkbox indicates the messages of the zone row. As shown in the example, an alarm message is pending for one zone. Even if the corresponding zone is currently not part of the display, the mini display always keeps all zones in view.

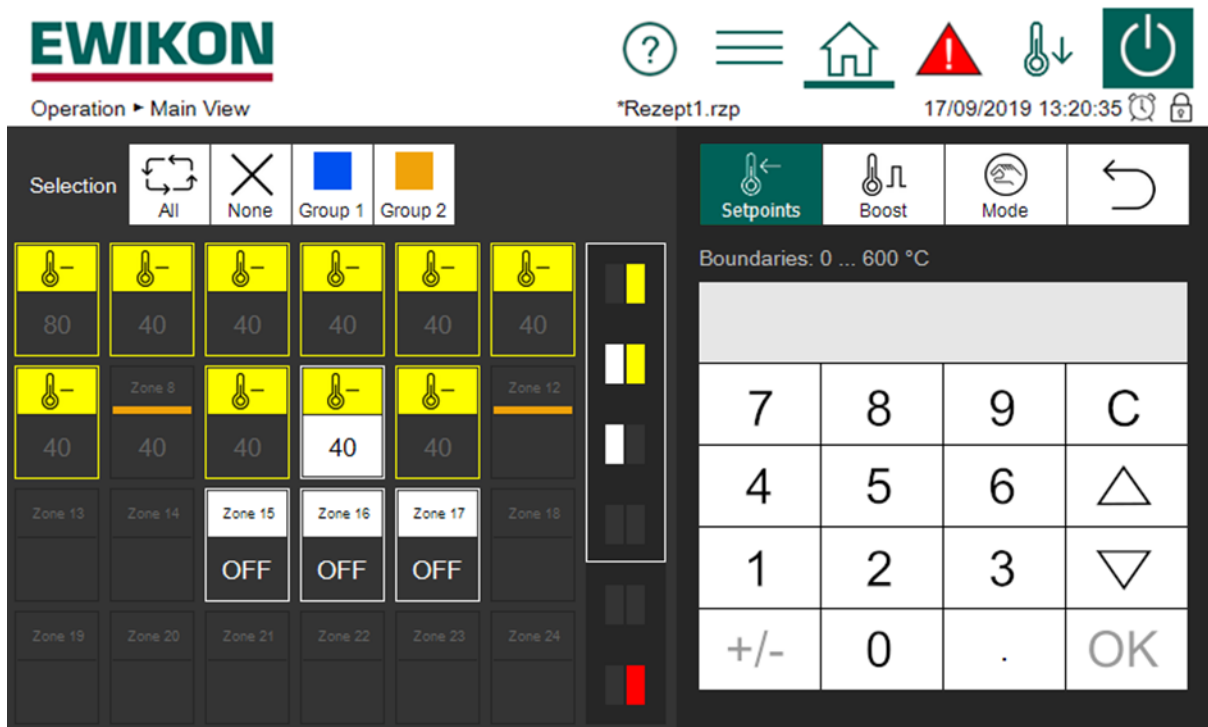


Figure 9 - Example of the scrollbar with mini view

5.3 Navigation menu

For a better overview, the navigation menu has been divided into three levels.

- Setup** For setting and configuring the mould-specific settings for all the control zones.
- Operation** For displaying process values and faults during operation and configuring control-related settings
- Settings** For the general configuration and display of information about the controller.

Each of these three main areas is, in turn, divided into subareas that are explained in more detail below.

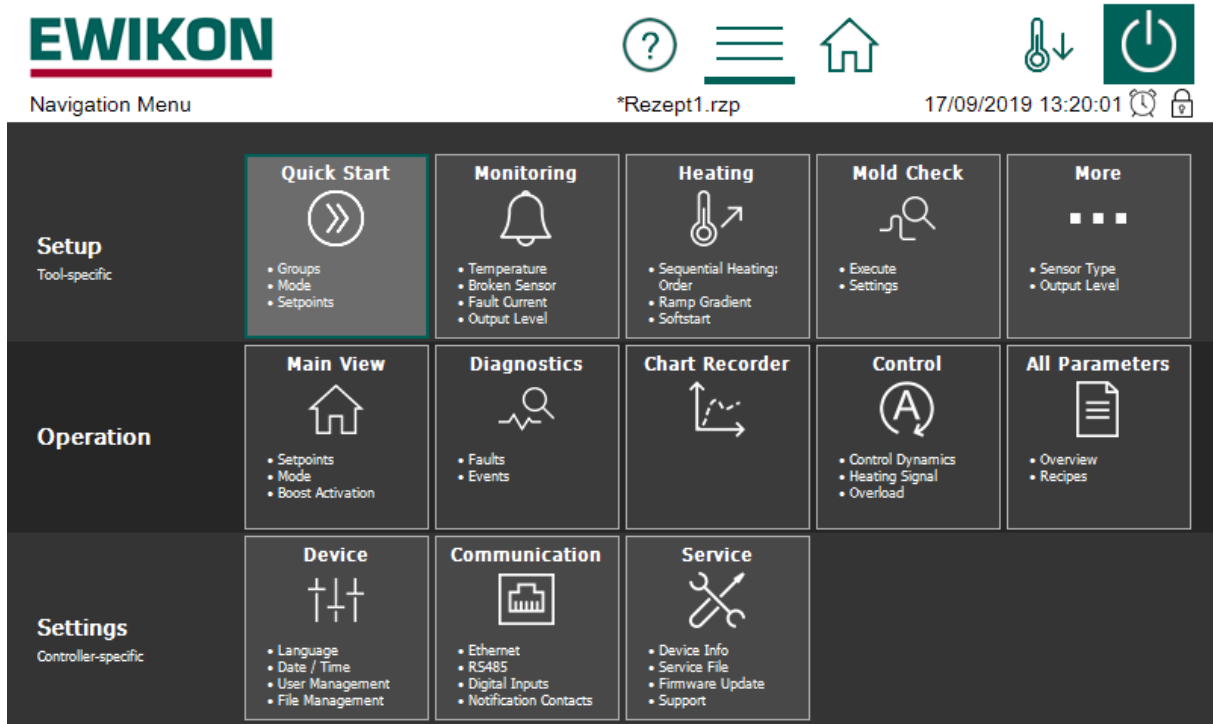


Figure 10 - Navigation menu

5.3.1 Setup

All the mould-specific settings should be made before operation. The quick start guides users through the key settings for bringing the controller into operation as quickly as possible. The "Monitoring" menu item is used for monitoring process values and setting the corresponding limits. "Heating" contains functions that can influence the heating process. "Mould Check" is used to test the correct wiring of sensors and heating units. This function is particularly useful after initial installation or after mounting operations but can also be useful for analyzing faults.

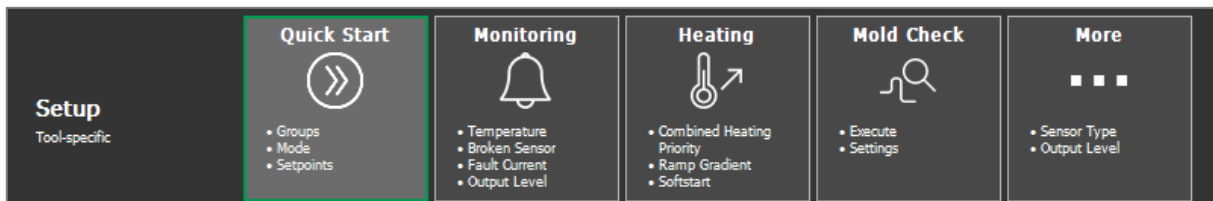


Figure 11 - Setup

 
The individual functions are explained in more detail below.

5.3.1.1 Quick start



The basic zone settings can be entered in quick start. Zones can be grouped here and setpoint temperatures and operating modes entered for the zones.

5.3.1.1.1 Groups



Setup > Quick Start > Groups

Zones can be combined into groups, considerably facilitating operation. It makes sense, for example, to allocate the zones for nozzles and manifolds to different groups. In this way, the grouped zones can be easily selected for simultaneous operation later on. If no groups are to be defined, this section can be skipped.




If several zones are selected, the last digit in the name of the zones is automatically incremented. However, the actual zone numbering is always retained and prefixed to the new name.

Empty zone or group names reset the name back to the original name.

Factory setting:

	All zones without a group
---	---------------------------

 5.3.1.1.2 Operating mode



Setup > Quick Start > Mode




In the "Mode" menu item, a specific operating mode can be entered for each zone.

Procedure:


- First select the zones on the left whose operating mode is to be changed.
- Then, on the right side, select one of the operating modes.



The following operating modes are defined:


Operating mode	Description
Control Mode 	In normal operating mode, the hot runner controller will control the output in such a way that the measured temperature attains a specified setpoint value. The output level (0...100%) at the output is calculated automatically. In steady state operation, the actual value and setpoint value will be identical.
Manual Mode 	During manual operation, a constant output level will be maintained at the heating output. 0% means that the heating output is permanently off, 100% means that the heating output is permanently on. Manual operation can be used, for example, to manually maintain operation of the control zone until a defective sensor is replaced.
Zone inactive OFF	Zone inactive = Zone is switched off. If the sensor is connected, the temperature monitoring of the cut-off temperature remains active.
Monitoring Mode 	With this setting, a zone can only be used for display and temperature monitoring. No output power is emitted.
Reference Mode Z#	In reference mode the power output (output level) of the reference zone is adopted. This allows to control multiple heaters with a single sensor.




Factory setting:



All zones will be switched off (**OFF**).

5.3.1.1.3 Setpoint value



1.  2.  3. 

Setup > Quick Start > Setpoints


It is possible to enter setpoint values as the specified temperatures for different situations: for normal operating mode, the standby value and the specified value for boosting.

Procedure:

- First select the zones on the left whose setpoint value is to be displayed or changed.
- On the right side, select one of the setpoint values described below




- Enter the desired value in the input box
- Confirm with OK.

Value	Description	Settings
Setpoint	Specified temperature for a zone in normal operating mode.	Min: 0 °C Max: 600 °C Standard: 0 °C
Output Level	The output level can be set manually. However, this value will only be applied to zones in manual mode or with a broken sensor and corresponding broken sensor behavior set to a specific output level.	Min: 0% Max: 100% Standard: 0%
Standby temperature	It is recommended that use be made of the standby function to protect the plastic melt and reduce energy costs. The standby temperature can be specified here as a function of the materials used. This determines the value to which the zones should cool down. The standby function is activated in the menu bar with the button  or, alternatively, via a control input.	Min: 0 °C Max: 300 °C Standard: 150 °C
Boost Offset	By implementing the boost function, the setpoint temperature for individual zones or groups is raised by an adjustable value for a specified period of time. This function can be used to set a higher temperature at the nozzle tips for a short time in order to enhance the opening of the gate during start-up. The boost function is activated from the home view. The editor with the boost button can be opened by clicking on a zone.	Min: 0 K Max: 50 K Standard: 0 K
Boost Duration	For setting the time mentioned above for which a zone is to be boosted	Min: 0 sec Max: 900 sec Standard: 60 sec

5.3.1.2 Monitoring

5.3.1.2.1 Temperature monitoring

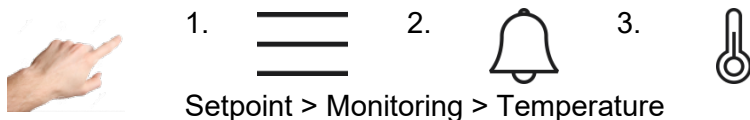




Different temperature limits can be set on the temperature monitoring page.



Procedure:

- First select the zones on the left whose temperature limit is to be changed (see chapter Selection of zones and groups for)
- On the right side, select one of the values described below




- Enter the desired value in the input box
- Confirm with OK.

Value	Description	Settings
High Temperature Limit	<p>If the actual value exceeds the limit value set here, the corresponding zone will depict a corresponding symbol: </p> <p>The LED strip will light up red and the zone will temporarily turn off its output. A potential-free contact can signal this alarm to the outside. If the actual value falls below this limit value, this alarm will automatically deactivate.</p>	<p>Min: 0 °C Max: 600 °C Fühlertyp J 800 °C Fühlertyp K Standard: 400 °C</p>
Upper Tolerance Range	<p>For temperature monitoring, a tolerance range can be specified above the set-point. If the actual value is over the upper tolerance range, this will be signaled as a warning. This is depicted on the relevant zone with a warning symbol()</p> <p>The LED strip will light up yellow. A potential-free contact can signal this alarm to the outside. The outputs will not be switched off.</p>	<p>Min: 1 K Max: 600 K Standard: 15 K</p>
Lower Tolerance Range	<p>For temperature monitoring, a tolerance range can be specified below the set-point. If the actual value is under the lower tolerance range, this will be signaled as a warning. This is depicted on the relevant zone with a warning symbol()</p> <p>The LED strip will light up yellow. A potential-free contact can signal this alarm to the outside. The outputs will not be switched off.</p>	<p>Min: 1 K Max: 600 K Standard: 15 K</p>



Low Temperature Limit	<p>If the actual temperature falls below the limit value set here, the relevant zone will be marked with a corresponding alarm:  The LED strip will light up red. A potential-free contact can signal this alarm to the outside. If the actual value exceeds this limit value, the alarm will be automatically deactivated.</p>	<p>Min: 0 °C Max: 600 °C Standard: 0 °C</p>
Shut-off Temperature	<p>If the actual value of <u>one</u> zone exceeds the shut-off temperature set here, <u>all</u> the zones will be switched off. All zones will be marked with a corresponding alarm:  For the relevant zones the corresponding alarm flashes. The LED strip will light up red. A potential-free contact can signal this alarm to the outside. The controller can only be operated again with an error confirmation or a restart.</p>	<p>Min: 0 °C Max: 600 °C Standard: 500 °C</p>
Temperature Offset	<p>The temperature offset is added to the actual value and affects its display and temperature monitoring.</p>	<p>Min: -50 °C Max: 50 °C Standard: 0 °C</p>

 5.3.1.2.2 Broken sensor monitoring




Setup > Monitoring > Broken Sensor


The controller behaviour in the event of a broken sensor during normal operation is set out here.


Behaviour	
Output Level 0%	The zone reports an alarm and adjusts the output level to 0%.
Average Output Level YM	The zone reports sensor break as an alarm and then switches to the previously averaged output level.
Defined Output Level	The zone reports sensor break as an alarm and then switches permanently to the output level that can be adjusted here. The output level can be specified after pressing the  button and is displayed at the zones.
Output level of Reference zone	The zone reports sensor break as an alarm and then switches to the output level of a reference zone that can be defined here. The reference zone can be specified after pressing the  button and is displayed at the zones with Zxxx (xxx = number of the reference zone).

 
In the "Setup > More > Sensor type" menu, the monitoring can also be completely deactivated by selecting "No sensor".

5.3.1.2.3 Fault Current Monitoring



1. 

2. 


3. 


Setup > Monitoring > Fault Current


Behavior	Description
No Signal	Fault current monitoring is switched off
Only Signal	Fault current monitoring detects fault currents that flow on account of moisture in the mould or insulation damage. If "Only Signal" is selected, fault current monitoring is activated and an alarm is generated if the limit value is exceeded.
Signal and dry out	If "Signal and dry out" is selected, fault current monitoring is activated. If the limit value is exceeded, an alarm will be generated and, in order to dry out the mould, all the zones will be heated up to 100°C until the fault current falls below the limit value. If the alarm doesn't disappear after drying out an insulation damage. Note that the alarm could also


The factory setting is: Signal and dry out

5.3.1.2.4 Output level monitoring




1. 

2. 

3. 

Setup > Monitoring > Output Level


Value	Description	Settings
Output: Reference Value	The output level calculated during normal operating mode can be monitored. If the calculated value deviates from this reference value, it could be a sign of an irregularity in the controlled system. There could perhaps be leakage in the nozzle. Setting this to "0" switches off the monitoring.	Min: 0 % Max: 100 % Standard: 0% (off)

 Output: Tolerance If the current output level exceeds or falls below the reference value by the set tolerance, a warning is generated. The LED strip lights up yellow and, on the touch display, the relevant zone is marked with a warning symbol . A potential-free contact can signal this alarm to the outside. The outputs will not be switched off.


Min: 0%
Max: 100 %
Standard: 100 %

Adopt average output level By pressing “Adopt average output level”, the current average output level that has been calculated will be set as the new reference value for output level monitoring.


5.3.1.2.5 Heating current monitoring

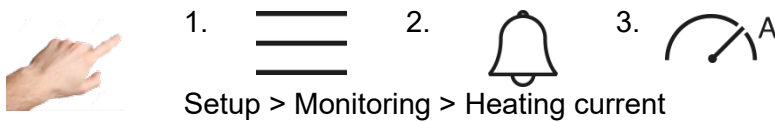

Heating current monitoring is used to detect defective heating units or supply lines. A message is generated if the measured current deviates from the specified reference value.

Value	Description	Settings
Current: Reference Value	The heating current to be monitored can be specified here. Any deviation is calculated on the basis of this reference value. Entering a setting of 0.0 A will switch off the monitoring. The current will, however, continue to be displayed.	Min: 0,0 A Max: 40,0 A Standard: 0,0 A
Current: Tolerance	The tolerance set here is the maximum permitted deviation of the present heating current measured from the reference value. If the heating current exceeds or falls below the tolerance, a warning will be generated. The LED strip will light up yellow and, on the touch display, the relevant zone will be marked with a warning symbol  .	Min: 0,0 A Max: 16,0 A Standard: 0,5 A
Adopt heating current	When the “Adopt heating current” button is pressed, the present heating current measured will automatically be set as the new reference value for current monitoring.	

 5.3.1.3 Heating




The heating behaviour of each individual zone can be selected here.

Function	Description	Settings
Max. Temperature Difference	The maximum temperature difference defines by how much the zones within the same priority group are allowed to deviate. This value is called the maximum temperature deviation.	Min: 1° Max: 100° Standard: 25°C
Sequential Heating: Order	<p>Heating of zones in a defined order heating avoids thermal disbalances in the mould by grouped, smooth heating with respect to the slowest zone.</p> <p>When heating the zones are grouped by their priority and each priority group is heated sequentially starting with 1. The maximum temperature difference is kept for zones in the respective priority group.</p> <p>Factory setting: All zones in Group 1 (all values = 1)</p>	Standard: 1
Cooling Limit	<p>In accordance with the order of sequential heating, sequential cooling in reverse order is also possible by setting a cooling limit value per zone. When the controller is switched off, the zones that last heated up cool down first. When all these zones have reached their cooling limit value, the next zones start cooling. As soon as no more zones heat up, the controller switches off automatically.</p> <p>Cooling is indicated by alternating flashing of and . To cancel sequential cooling, press . In the window that appears, you can choose between switching off all heating zones immediately and heating up again.</p>	Min: 0° Max: 500° Standard: 0 (0= no sequential cooling)

Softstart	The softstart enables gentle heating of the mould. All the zones are heated separately and gently to a maximum of 100°C, independently of a higher setpoint temperature. Up to a temperature of 50°C, each zone is heated with a maximum output level of 50%. The output level is then slowly increased to 100% as a function of the actual value. Once 100°C has been reached, the soft start has been completed and the zone can heat up at full power.	Standard:	Soft start is activated for all zones
Ramp Gradient	The ramp function is executed when a setpoint value is changed. It ensures that the new setpoint is approached at an adjustable, constant rate.	Min: Max: sec Standard:	0,00°C / sec 99.99 °C / sec 0°C / sec


5.3.1.4 Mould Check

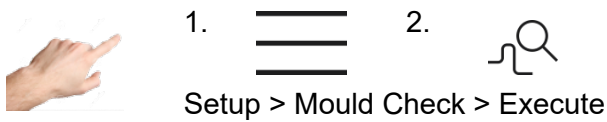

The mould check tests the sensors and heating units and is particularly useful after initial installation or assembly work, and also in the event of irregularities during normal operation. The mould test detects: mixed up sensors, heating units and plugs as well as sensor polarity reversal and short-circuiting. Irrespective of the selection, all zones will be monitored.

First of all, select the zones which should be tested. To start the test, press the start button with the arrow pointing to the right. The selected zones will now be tested one after the other. The status of the zones during the test will be represented by the following symbols:

Symbol	Description
0:25	This zone is currently being tested. The duration of the mould check for this zone is shown in minutes: seconds.
	The mould check for this zone has been successfully completed.
	Zone in the queue.

 




Function	Description	Settings
Mold Check Timeout	The mold check usually detects a sensible duration based on the responsiveness of the zone. For extreme heating circuits this can be overridden by setting a specific diagnosis time. When exceeding this time, the test will fail with timeout.	Min: 0 s Max: 900 s Standard: AUTO (0 s)
Abort check on error	The mold check is usually aborted if the test fails for a zone or if any of the selected zones reports an alarm. This is supposed to make it easier to find problems in the wiring. The described behavior can be changed by this parameter – for example, to get a complete protocol.	Standard: “Abort check on error active”

5.3.1.5 More

5.3.1.5.1 Sensor Type

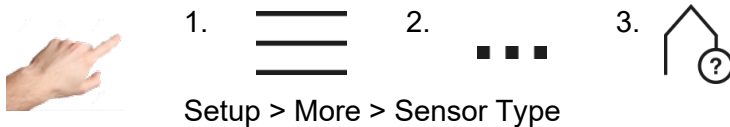


The sensor type to be used for the temperature measurement can be determined here. The two thermocouple types FeCuNi Type J and NiCrNi Type K are available for selection.

It is also possible to select “No sensor”. In this case, either no sensor is available, or the sensor is not used. The selected zones then have no actual value and all the temperature-related alarms, signals and logs are deactivated.

	<p>Please note:</p> <p>No monitoring is performed for values exceeding or falling below temperature limits, and no sensor breaks are signaled. No entries relating to this are made in the event list.</p>
--	--

5.3.1.5.2 Max. Output Level

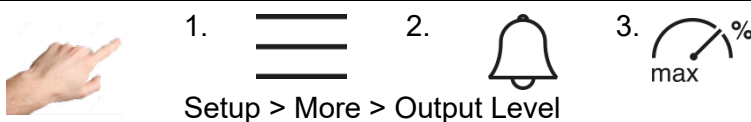

The maximum output level serves to limit the output power of the controller outputs. Normally, the output level is within the limits 0% to 100%. The upper limit can be set to a new value by limiting the output level. The output level is then limited to this new value.

In the zone display, the output level will be placed in brackets once the output level limit is attained. In the following example, an output limit of 70% is shown in the zone display.

	Zone 2
Act [°C]	235
Set [°C]	248
Y [%]	(70)

Display of the output level limit:
Output level Y is currently limited to 70%.

Setting limits: 0 ... 100%
Factory setting: 100%

5.3.2 Operation

Under operation, the main functions that are required during the process can be selected. This includes the home view for changing the setpoint values, output levels and operating modes, the diagnosis for fault analysis, the plotter for analyzing zone profiles over time, the control parameters and an overview of all parameters that can be saved as a recipe.

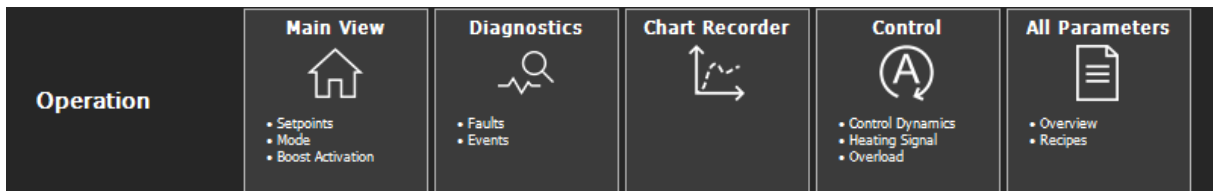


Figure 12 - Operation

These functions are described in greater detail below.


5.3.2.1 Main View



The main view shows all the zones with their process values, faults and information on the operating status.

5.3.2.1.1 General presentation

The view is depicted in the following manner:


Zone status	Presentation
Zone active	Black background
Zone inactive	Grey background. Zone is off.
Manual	Zone in manual operation, process values in blue
Monitor	Zone in monitoring operation, process values in orange
Boost	Zone in boost mode
Standby	Zone in standby mode
BSB	Behaviour in the event of sensor break is depicted in the zone designation box: BSF = <u>B</u> roken <u>S</u> ensor <u>B</u> ehavior
Fault icon	The fault icon flashes in the zone designation box. Clicking on the fault icon will call up the diagnosis.
Combined	The zone belongs to a heating group and is uniformly heated together with the other zones in the group.
Combined*	This zone is the most inert zone in the group that is currently being heated.
Empty box	A box for displaying a process value remains empty if the set operating mode is not relevant for this process value. Example: in monitoring mode, no output level is output and hence the process display for the output mode remains empty.
(50%)	The output level display <u>in brackets</u> means that the output level is currently limited. This can be the case during the heating phase with a soft start, for example.
	The actual value display with this symbol means that no valid actual value is being measured. This symbol only occurs in combination with faults such as a sensor fracture or CAN faults.
Optimizing	The controller automatically determines the control parameters.
Check	Zones which are selected for mould check.
Check*	Zone which is currently tested by mould check


Process value	Description
Actual value	The actual temperature measured on the sensor
Setpoint	Specified setpoint temperature
Output Level	Controller output signal
Heating current	Heating current flowing through the heating units
Temperature Deviation	Actual value - Setpoint value
Temperature Deviation, graphical	Graphic presentation of the control deviation by means of a bar. The height of the bar corresponds to the control deviation. If the control deviation exceeds the tolerance range, the bar will turn yellow. If it exceeds the limit for an excessively high temperature, it will turn red. The maximum display range for the control deviation can be specified with the "Tolerance range" parameters. Setup > Monitoring > Temperature
Control Quality	From the control quality displayed, it is possible to see how constantly the zone can maintain the setpoint value. 100% means no deviation over a fairly long period of time. Zones with process-related, short-term tolerances (friction, injection cycle) have a lower quality.
Mean Output Level	The mean output level is the average output level that has been output over a specified period of time.
Fault Current (Phase)	Currently measured fault current for every phase.
Internal Setpoint	The internal setpoint value is the setpoint value currently employed for control. Depending on the operating conditions and functions, the internal setpoint value may deviate from the actual setpoint value. In standby mode, for example, the controller applies the set standby temperature. In this example, the internal setpoint value would display the standby temperature.


The following examples illustrate the different presentations:

Presentation	Description						
<table border="1"> <tr> <td></td> <td>Zone 1</td> </tr> <tr> <td>Ac [°C]</td> <td>23</td> </tr> <tr> <td>Set [°C]</td> <td>OFF</td> </tr> </table>		Zone 1	Ac [°C]	23	Set [°C]	OFF	<p>Zone 1 is inactive, the output is deactivated.</p> <p>The display boxes for the process values remain greyed out. The actual value is displayed.</p>
	Zone 1						
Ac [°C]	23						
Set [°C]	OFF						
<table border="1"> <tr> <td></td> <td>Zone 1</td> </tr> <tr> <td>Act [°C]</td> <td>235</td> </tr> <tr> <td>Set [°C]</td> <td>238</td> </tr> </table>		Zone 1	Act [°C]	235	Set [°C]	238	<p>Active zone with the actual and setpoint value display</p>
	Zone 1						
Act [°C]	235						
Set [°C]	238						

	Zone 1	Active zone with 4 process values:
Act [°C]	235	- actual value
Set [°C]	238	- setpoint value
Y [%]	15	- output level
I [A]	8,5	- heating current

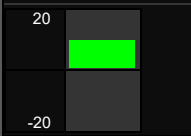


	Zone 1	Active zone with actual and setpoint value and graphic display of the control deviation ΔT .
Act [°C]	240	If the bar display for the control deviation is above the zero line, the actual value is too high. In this example, the actual value is 10° above the setpoint value.
Set [°C]	230	
ΔT [°C]		
		The display range of the bar corresponds to the tolerance range value, in this case 20°.

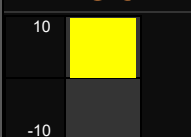	Zone 1	Active zone with graphic display of the control deviation.
ΔT [°C]		If the bar display of the control deviation is below the zero line, the actual value is too low.

	Zone 1 Monitor	Zone 1 in monitoring mode with the actual value, setpoint value and the graphic control deviation.
Act [°C]	250	Process values in monitoring mode are shown in orange.
Set [°C]	230	
ΔT [°C]		
		The yellow bar indicates that the actual value is outside the tolerance range.
		In the example, the tolerance range is 10° and the control deviation 20°.

	Zone 1 Combined*	Active zone with the actual value and output level display.
Actl [°C]	235	Zone 1 is heated up in a group.
Y [%]	25	
		“*” means that this zone is the most inert in the heating group. All the other zones in the heating group show “group” without an “*”.

	Zone 1 Optimizing	After it is switched on, the controller establishes the optimum control parameters (automatic optimization).
Act [°C]	235	As soon as the optimum control parameters have been found, the word “Optimizing” will disappear.
Y [%]	25	

<p>Act [°C]</p> <p>Set [°C]</p>	<p>Zone 1 Manual</p> <p>235</p> <p>238</p>	<p>Zone 1 in manual operation</p> <p>Process values in manual operation are shown in blue.</p>
<p>Act [°C]</p> <p>Set [°C]</p>	 <p>200</p> <p>238</p>	<p>Zone with fault indication “Negative temperature deviation”.</p> <p>The warning signal with the yellow background flashes.</p> <p>Pressing the warning signal will open diagnostics.</p>
<p>Act [°C]</p> <p>Set [°C]</p> <p>Y [%]</p>	<p>Zone 2</p> <p>235</p> <p>248</p> <p>(70)</p>	<p>Active zone with 3 process values:</p> <p>In this example:</p> <ul style="list-style-type: none"> - actual value - setpoint value - output level: the output level is currently limited to 70%.
<p>Act [°C]</p> <p>Y [%]</p>	<p>Zone 1 Monitor</p> <p>250</p>	<p>Zone 1 in monitoring mode with actual value and output level.</p> <p>The output level display remains empty because no output level is output in monitoring mode (output is switched off).</p>
<p>Act [°C]</p> <p>Set [°C]</p>	<p>Zone 1 Boost</p> <p>235</p> <p>260</p>	<p>Zone 1 is in boost mode.</p> <p>Display in this example:</p> <ul style="list-style-type: none"> - actual value - setpoint value for boost (parameterized setpoint plus boost increase)
<p>Act [°C]</p> <p>Set [°C]</p>	<p>Zone 1 Standby</p> <p>120</p> <p>120</p>	<p>Zone 1 is in standby mode.</p> <p>Display in this example:</p> <ul style="list-style-type: none"> - actual value - setpoint value for standby
<p>Act [°C]</p> <p>Set [°C]</p>	 <p>237</p>	<p>Zone with “Sensor fracture” fault display.</p> <p>The alarm signal with the red background flashes.</p> <p>Pressing the alarm signal calls up the diagnosis.</p> <p>The triangle with an exclamation mark indicates that no valid actual value is available.</p>
<p>Act [°C]</p> <p>Set [°C]</p>	<p>Zone 1 BSB: 0%</p>  <p>237</p>	<p>The behaviour in the event of broken sensor (BSB) is shown in the zone designation box.</p> <p>In the present example, the setting is “BSB=0%”, which reduces the output level to 0% in the event of sensor fracture.</p>

5.3.2.1.2 Changing the setpoint value and output level

To change the setpoint value and output level in the home view, simply click on a zone.





Editor mode will then open, with selection buttons in the top right half of the screen and a numeric keyboard for entering the values.

First of all, the zones that shall be changed are selected. This can be done by clicking on the individual zones or by using the “All” selection button. If groups have also been defined in the quick start, these will similarly appear in the selection. By clicking on a group, the corresponding zones will automatically be selected.

By clicking on a group and then pressing the OK button, it is now possible to change the setpoint value or the output level for the selected zones, depending on which operating mode is active for the selected zones.

5.3.2.1.3 Activating the boost function

If the selected zones are to be boosted, the “Boost” selection button should be pressed. A window will then open for activating the boost function. The boost process is started by pressing the boost button. The background of the boost button will change colour to indicate that the boost is in progress. The background of the button acts like a progress bar, just in the other direction. As the duration increases, the coloured background decreases in size until the boost has finished. It is thus possible to see at a glance how long the boost process still has to run.

Example	Description
	Boost function not activated
	Boost function just started.
	The boost function has now run for half of the boost time.
	The boost function now has only 1/4 of the boost time to run.


5.3.2.1.4 Changing the operating mode

The procedure for changing the operating mode is precisely the same as that described in Chapter 5.3.1.1.2. Pressing on the “Operating mode” button will call up the window for setting the operating mode. It is now simply a matter of following the guided dialogue:

1. Select the zones for which the operating mode is to be changed and select the operating mode for these.
2. The selection is accepted by pressing the confirmation button.

5.3.2.2 Diagnostics

5.3.2.2.1 Faults

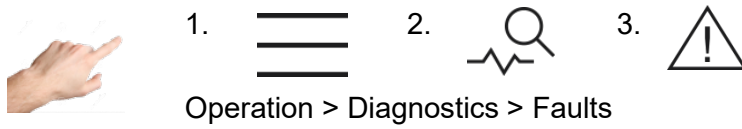


The Faults menu provides a convenient overview and explanations of existing warning and alarm-messages and alarms. For rapid assistance in the event of a fault, it is also possible to navigate to the troubleshooting function. This contains information and explanations on the type of fault and its cause.


Procedure:

- First select a pending warning or alarm on the left side.
- An explanation of the fault will then appear on the right side.



	<p>Critical faults must be acknowledged with ✓. Otherwise, it will not be possible to switch on the affected zone again.</p>
--	--

5.3.2.2.2 Events

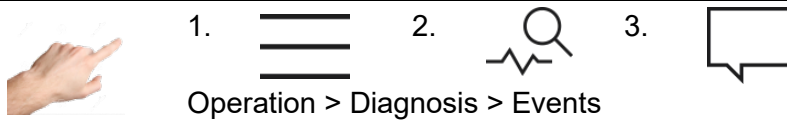

The events view contains a list of date and time-dependent controller information. In addition to all the warnings or alarms that occur, user logins and parameter settings are documented. The list is filled and overwritten automatically. The last 1000 entries are always displayed. The event list also is included in the service file (see Chapter 5.3.3.3) and can thus be saved and exported for evaluation.


5.3.2.2.3 Troubleshooting



Warning messages inform the system operator of potential problems. Production is continued, however. If an alarm message is issued, by contrast, the system operator is required to intervene. For critical alarms, a fault acknowledgement or system restart may be necessary. A detailed list of all the warnings and alarms is given in Chapter 5.3.2.2.4.

Procedure in the event of a fault (example: “defective triac” fault message):

Example 1 → To the fault handling via the navigation menu

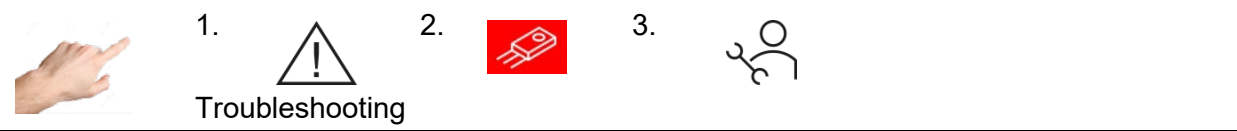

or

Example 2 → To the fault handling via a direct message in the affected zone













If alarms are issued for several zones in example 2, the messages for this zone will be displayed in filtered form. Press for an overview of all the messages.



Fault rectification provides possible causes for the pending message. It can still, however, happen that an undocumented cause is responsible for the pending message.



5.3.2.2.4 Warnings and alarms

Symbol / Status	Description	Cause	Alarm socket
	Positive temperature deviation The actual temperature is currently above the set tolerance range.	- Setting limit	Collective warning
	Negative temperature deviation The actual temperature is currently below the set tolerance range.	- Setting limit	Collective warning
	Current deviation The present heating current is above the set tolerance value.	- Tolerance value - Heating fault - Mains voltage fluctuation	Collective warning
	Output level deviation The mean output level is above the set tolerance value.	- Overmoulding - Heating aging - Defective parallel heating - Heating fault - Setting limit - Triac	Collective warning
	Sensor voltage The voltage in the sensor line is inadmissibly high	- Wiring error - Connection to neighbouring zone - Insulation damage	Collective warning
	Mains voltage Fluctuations detected in the mains voltage.	- Mains voltage fluctuations	Collective warning
	Fault current Residual current flowing in the affected phase.	- Moisture - Insulation damage	Collective warning
 or 	Sensor break The zone is not connected to the sensor.	- Sensor connection in the controller - in the connecting cable - in the mould	Collective warning or collective alarm
	Switch-off temperature The current temperature is above the maximum permitted temperature.	- Setting limit - Manual operation - Wiring error	Collective alarm

	<p>High temperature The current temperature is above the limit for an excessively high temperature.</p>	<ul style="list-style-type: none"> - Setting limit - Manual operation - Wiring error 	Collective alarm
	<p>Low temperature The current temperature is below the limit for an excessively low temperature.</p>	<ul style="list-style-type: none"> - Setting limit - Manual operation - Heating power - Wiring error 	Collective alarm
	<p>No connection to load No current flows when the outputs are controlled with an output level > 0%</p>	<ul style="list-style-type: none"> - Connection to mould - Cable/plug or heating unit defective - Triac defective 	Collective alarm
	<p>Sensor polarity The sensor polarity has been reversed. Increasing temperatures are recorded as negative temperature values. Alarm only disappears if the connection cable will be disconnected and the reserved polarity will be changed.</p>	- Wiring error	Collective alarm
	<p>Defective fuse No current flows despite the outputs being controlled</p>	<ul style="list-style-type: none"> - External fuse - Internal fuse - Insulation damage 	Collective alarm
	<p>Defective triac Current flows when the outputs are not being controlled.</p>	- Triac	Collective alarm
	<p>Relay fault The output relay of the relevant zone is defective.</p>	- Internal hardware error	Collective alarm
	<p>Load short circuit The current flowing is inadmissibly high.</p>	<ul style="list-style-type: none"> - Wiring error - Insulation damage - Heating 	Collective alarm
	<p>Internal bus error No communication to the affected power board.</p>	<ul style="list-style-type: none"> - Identical address assignment - Communication disrupted - Terminating impedance - Defective hardware 	Collective alarm
	<p>System fault The power board has detected a hardware fault.</p>	- Internal hardware fault	Collective alarm



Device group error

Communication in the device group does not work properly.

- Connection Error
- Configuration Error

Collective alarm

5.3.2.3 Chart Recorder



Operation > Chart Recorder

The chart recorder is used to analyze the control behavior of zones by displaying the profile over time of the process values for actual value, setpoint value and output level on a curve diagram. The curve is shown in the window with a black background. On the right of the screen are the arrow keys that can be used to select the zones for the display. Only one zone at a time is displayed in the curve window, with the three process values of actual value, setpoint value and output level. The process values to be displayed can be determined by clicking on the process value in question. If the process value is marked with a tick it will be displayed – if it has no tick, the process value will be hidden. At the bottom of the screen there are additional buttons that can be used for the following settings:

15 min The chart recorder displays a time range of 15 minutes.

60 min The chart recorder displays a time range of 60 minutes.

4 h The chart recorder displays a time range of 4 hours.



Zoom in
The chart recorder's display range is reduced



Zoom Out
The chart recorder's display range is enlarged



The display range can also be zoomed in/out by touching it. To do this, the desired range must be marked horizontally. The starting point must be indicated by touching the screen and swiping to the right. The display range is then marked in grey. As soon as the touch screen is no longer being touched, the marked area will be enlarged to fill the maximum displayable size in the display window.



The display range will change so that the current values are shown in the right-hand section.



Screenshot
The currently displayed chart is stored locally on the device.



Pressing this button opens a new window for filtering the zones to be displayed in the chart recorder.

5.3.2.4 Control



1. 2.


Operation > Control

The “Control” menu item contains settings that can be used to influence the control behavior of zones.


5.3.2.4.1 Control dynamics

Value	Description		
Automatic Optimization	The automatic control optimization determines the P, I and D components of the controller automatically. This is only performed for zones in normal operation directly after the outputs are switched on and is marked "Optimized" in the status text below the zone designation. The zones to be automatically optimized when they are switched on can be determined by activating and deactivating the function. To do this, the zones should first be selected and the function then activated/deactivated with the corresponding buttons.	Standard:	automatic optimization active
P component	P component of the PID controller The output level is reduced linearly before attaining the setpoint value. Increasing the P band causes a slower transient response.	Min: Max: Standard:	0 % 100 % 5%
I component	I component of the PID controller. The reset time T_N of the PID controller is specified in this setting. Increasing the reset time causes a slower transient response.	Min: Max: Standard:	0 s 999 s 80 s
D component	D component of the PID controller. The derivative time T_V of the PID controller is specified in this setting. The derivative time is only effective with fast changes in the actual value. Increasing the derivative time causes a more dynamic transient response.	Min: Max: Standard:	0 s 999 s 16 s

The procedure for changing one of the PID parameters is as follows:


- First select the zones on the left whose parameters are to be changed
- Then, on the right side, select the desired parameter
- Open the box for entering the value with 
- Enter the desired value in the input box
- Confirm with OK

5.3.2.4.2 Heating signal

Clicking on the  selection button opens the heating signal selection. A distinction is drawn in principle between pulse operation and phase control for the heating signal. Pulse operation and phase control are two different means of controlling the heaters.





Setting	Description
Pulsed Operation	<p>During pulse operation, the heating output is switched on and off at full voltage in a specific ratio. The ratio of the time switched on to the time switched off is determined by the output level that is calculated by the controller. An output level of 25%, for example, means that the output is switched on for one time unit and then remains switched off for 3 time units. With a high output level, pulsed operation delivers better control behavior. The output switches the voltage in zero crossing mode, which causes less wear on the heating unit among other things.</p> <p>Factory setting: All zones in pulse operation</p>
Phase Control	<p>With phase control, the voltage at the heating output is kept proportional to the calculated output level. With a lower output level, phase control ensures better control behavior. Phase control, however, causes more wear than pulse operation.</p> <p>Factory setting: All zones in pulse operation</p>
Mixed	<p>This setting activates a combination of both operating modes, uniting the advantages of both.</p> <p>Factory setting: All zones in pulse operation</p>

The procedure for changing the heating signal is as follows:

- First select the zones on the left whose heating signal is to be changed.
- Then, on the right side, select the desired heating signal
- Confirm with .


5.3.2.4.3 Alerting



Function	Description
Load Detection	<p>The load detection triggers an alarm if there is no current despite power output. This is used to detect whether a heater is correctly connected. A reliable load detection requires a current of at least 100 mA.</p> <p>The function can be deactivated in the selection "Load detection". The deactivated load detection is displayed by — in the zone selection.</p> <p>This function can only be deactivated for power cards with firmware 3.5 or higher. For power cards with firmware 3.4 or lower the input is blocked and is displayed with .</p>
Overload Detection	<p>The overload detection prevents the outputs from being switched on in the event of overload (> 17 A), e.g. due to a short circuit. This prevents the fuse from being tripped and thus its replacement.</p> <p>The function can be deactivated in the selection "Overload detection". This allows the outputs to be switched on even at high currents (>17 A). The deactivated overload detection is displayed by — in the zone selection.</p> <p>This function can only be deactivated for power cards with firmware 2.7 or higher. For power cards with firmware 2.6 or lower the input is blocked and is displayed with .</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">  <p>Attention! There is no longer an overload detection. This means that only the fuses are now used to protect against excessive currents.</p> </div>
Delay Fuse defective	<p>A delay means that the fault is only signaled after it has been present for a set time. This allows the sensitivity to mains disturbances to be reduced.</p>
Relay Error Detection	<p>The relay error triggers an alarm if the output relay cannot be opened or closed as expected. If the relay is mechanically damaged, it is not possible to safely switch the output</p> <p>This function can only be deactivated for power cards with firmware 4.2 or higher. For power cards with firmware 4.1 or lower the input is blocked and is displayed with .</p>

Triac Defective Detection

The defective triac detection triggers an alarm if there is a current despite not power output. This prevents uncontrolled heating before a high temperature is signaled.

	<p>Attention! Triac monitoring is no longer performed. As a result, the system is only switched off if limit temperatures are exceeded. These must always be set specifically for the application.</p>
---	--

5.3.2.5 All Parameters



Operation > All Parameters

All the parameters are arranged in a clear table here, which can also be saved as a recipe. An existing recipe can also be loaded.

The rows contain the individual parameters that are assigned to a zone in the columns. Vertical scrolling leads to further parameters, and horizontal scrolling shows further zones.

Function	Description
----------	-------------

Save



Using the “Save” button, the entire parameter set can be saved locally on the device in a file. Once the button has been pressed, a dialog will open for selecting the storage location and entering the name.

After selection of the desired storage location, a file with the name “< New recipe file >” will appear in the selection box. By selecting this file and pressing the confirmation button, the prompt for entering the file name will appear. This is adopted by pressing the Return ↵ key.

Open



The “Open” button can be used to load a recipe that has already been compiled into the controller. This is the simplest way to bring the controller into operation with just a few clicks. After the button has been pressed, the dialog will open to select the recipe file. First of all, the directory should be selected (local or possibly a flash drive plugged into the front of the controller). Then the required recipe file is selected and displayed on the screen by pressing the confirmation button ✓.

The parameters can now be checked again BEFORE they are transferred to the controller. A prompt appears for accepting the parameter set. Pressing the confirmation button ✓ loads the parameter set into the controller, and pressing X cancels the process and returns the user to the parameter overview.

5.3.3 Settings

All the device-specific settings are made under “Settings”. These are generally parameters that only need to be set once. They include language, temperature unit, date/time, timer, user administration and file management. Communication with external devices can also be specified. In addition, “Settings” contains all the topics of relevance for service and support, such as controller information, firmware update, service file, support and factory settings.

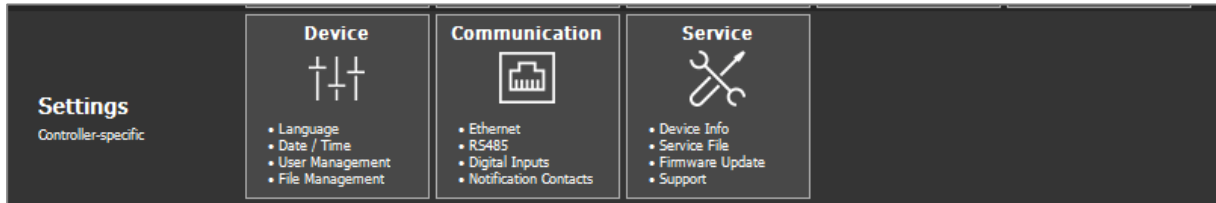


Figure 14 - Settings

5.3.3.1 Device

 
5.3.3.1.1 Language



Settings > Device > Language

The language of the user interface can be specified by selecting the corresponding flag. When the line containing the flag is pressed, this will be highlighted in colour. To adopt the selected language, the selection must be confirmed with the “Accept changes” button. All the texts will then be displayed in the new language during the runtime, and the selected language marked with a checkmark.

5.3.3.1.2 Temperature Unit



Settings > Device > Temperature Unit

Here the temperature display can be set to either °C (Celsius) or °F (Fahrenheit). When the corresponding line in the left window of the display is pressed, this will be highlighted in colour. To accept the changes, the selection must be confirmed with the “Accept changes” button. All displays during the runtime will then be shown in the selected temperature unit. The selected temperature unit will be marked with a tick.

5.3.3.1.3 Date / Time



- 1.
- 2.
- 3.

Settings > Device > Date / Time

On this page, the time for the controller can be precisely set with the year, month, day, hour and minute. A precise time is of particular importance for process values and events that are recorded with a time stamp.

To change the date or the time, it is necessary to use the

1. Arrow keys to set the corresponding value for the year, month, day, hour or minute.
2. Pressing the arrow key increases (Δ) / reduces (∇) the value in the box highlighted in colour.
3. The changes are adopted by pressing the \checkmark button.

5.3.3.1.4 Heating Timer



- 1.
- 2.
- 3.

Settings > Device > Heating Timer

 
Using the timer, it is possible to have the outputs switched on and off automatically at certain times and on certain days.

The necessary settings may be found in the guided dialogue (1. 2. 3. 4.) The procedure is as follows:

1. First of all, the days on which automated switching on/off is required are activated. To do this, click on the box for the corresponding day of the week (Mon=Monday, Tue=Tuesday, etc.). The day of the week is marked with an \checkmark and, in the lower part of the window, the times for switching on/off are proposed. The tick indicates that automatic switching on/off will be performed on this day. By pressing this box once again, the tick will be hidden, deactivating automatic switching on/off.
2. To change the times for ON (switching on) and OFF (switching off), it is necessary to click in the relevant box. A further dialogue will open on the right side where the selected time can be set with the arrow keys. Each time the arrow key is pressed, the value in the box that is highlighted in colour will increase (Δ) / decrease (∇).
3. The changes can be activated by pressing the "Accept changes" button \checkmark .
4. X closes the dialogue.

As soon as the timer is activated, an alarm clock symbol appears on the right of the menu bar next to the date and time.

5.3.3.1.5 User Management



Settings > Device > User Management

The controller is protected against unauthorized settings by means of user levels. Each user level determines which changes are permitted. There are four user levels: Display, Operation, Configuration and Administration. If the current user level is setting, for example, then this is indicated in the menu bar with the lock. A separate password can be assigned to each user level.



The controller is delivered with the following default password settings:
 Operation: 111111 ; Configuration: 202020 ; Administration: 170266




To change a user level, it is sufficient to click the corresponding line in the available user levels. The box will be highlighted in colour. To accept the new user level, it is necessary to press the confirmation button. The user will then be prompted to enter the password for this or the next highest level. Clicking on “Login” opens the screen for entering the password, which is accepted with the Return key ↵. The higher the user level, the more changes are permitted. The following change options are allocated to the individual user levels:

User level	Change options
Display	No change options Only navigation
Operation	<ul style="list-style-type: none"> ■ Setpoint values Activation of boost Activation of standby Operating modes Diagnosis Locked: <ul style="list-style-type: none"> Parametrisation Fault handling Mould test User administration Factory setting

Configuration	<ul style="list-style-type: none"> ■ Setpoint values Activation of boost Activation of standby Operating modes Parametrisation Mould test Diagnostics and troubleshooting <p>Locked:</p> <ul style="list-style-type: none"> User administration Factory setting
---------------	--

Administration No restrictions

The administrator can change and delete the passwords.

Function	Description
<p>Change</p> 	<p>Select the user level for which the administrator wishes to change the password. This will be highlighted in colour. Then click on change password. A confirmation prompt appears, asking whether the password is really to be changed. If it is confirmed, the new password must then be entered, which will be adopted by pressing return ↵. The new password must be entered a second time for verification. A brief message then appears at the bottom of the screen indicating that the password has been successfully changed.</p>
<p>Deactivate</p> 	<p>First, the user level for which the administrator wishes to deactivate the password must be confirmed. This is then highlighted in colour. Next, click on deactivate password. A confirmation prompt appears, asking whether the password is really to be deactivated. After confirming a brief message appears at the bottom of the screen indicating that the password has been successfully deactivated.</p>
<p>Forgot</p> 	<p>By clicking on “Forgot password”, information will appear on how a new password can be requested. Support will supply a one-day password for the Administration user level. The contact data for support can be found in the Service menu option (Settings > Service > Support)</p>





5.3.3.1.6 File Management



- 1.
- 2.
- 3.

Settings > Device > File Management


Under file management, it is possible to copy (to a flash drive, for example) or move local files on the controller and to rename or delete files. Simply follow the steps in the guided dialogue.

Function	Description
<p>Copy</p> 	<p>This function copies a file to a new target directory. The local file is retained.</p> <p>To copy a file, select one or more files from the list of available files by clicking on the file name. The dialogue will then open on the right-hand side of the screen. Clicking on “Copy” and “Confirm selection” will activate the copying process. The dialogue for selecting the target directory will appear. The target directory can be changed by pressing the arrow. After selecting the desired target directory, the copy process can be confirmed ✓ or cancelled with X. Successful copying is indicated by a brief message at the bottom of the screen.</p>
<p>Move</p> 	<p>This function is used to move a file to a new target directory, i.e. the file is then no longer in the original directory. One or more files must be selected from the list of available files by clicking on the file name. The dialogue will then open on the right-hand side of the screen. Clicking on “Move” and “Confirm selection” will activate the move. The dialogue for selecting the target directory will appear. The target directory can be changed by pressing the arrow. After selecting the desired target directory, the process can be confirmed ✓ or cancelled with X. If the files have been successfully moved, this will be indicated by a brief message at the bottom of the screen.</p>
<p>Rename</p> 	<p>To rename a file, select one file from the list of available files by clicking on the file name. The dialogue will then open on the right-hand side of the screen. Clicking on “Rename” and “Confirm selection” will activate the dialogue for entering the new name, which is then adopted by pressing Return. Successful renaming is indicated by a brief message at the bottom of the screen.</p>
<p>Delete</p> 	<p>To delete a file, select one or more files from the list of available files by clicking on the file name. The dialogue will then open on the right-hand side of the screen. Clicking “Delete” and “Confirm selection” will delete the selected files.</p>

5.3.3.2 Communication

Communication contains settings and functions that are necessary for communicating, signalling with and for external control by an injection moulding machine.

5.3.3.2.1 Ethernet

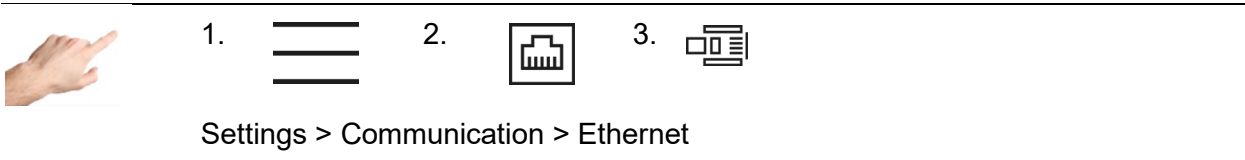

Ethernet is the network interface of the controller. The menu shows the parameters of the Ethernet interface, such as IP address, which are necessary for data exchange with the controller via the FE3 protocol or OPC UA (Euromap 82.2).

Function	Description
IP-Address	Shows the current IP address of the controller. Setting options: Automatic → With this setting, the device expects an automatic assignment of the IP address by a so-called DHCP server. Manual → With this setting, the IP address can be entered manually. Factory setting: Automatic
Subnet Mask	Setting options: Automatic → With this setting, the device expects an automatic assignment of the IP address by a so-called DHCP server. Manual → With this setting, the IP address can be entered manually. Factory setting: Automatic
Default Gateway	Setting options: Automatic → With this setting, the device expects an automatic assignment of the IP address by a so-called DHCP server. Manual → With this setting, the IP address can be entered manually. Factory setting: Automatic

**Protocols
(not adjustable)**

Available Ethernet protocols

 
Feller FE3BUS → UDP8070

Proprietary ASCII protocol that almost completely maps the controller functions - A protocol specification is available on request.

OPC UA (OPC40082-2) → TCP4840

In accordance with Euromap 82.2, status information, general information and determined process data are provided by the pro CONTROL hot runner controller. In addition, hot runner controllers can be parameterized by the injection moulding machine. In addition to operating modes and setpoints, alarm limits and the heating process can also be adjusted, so that Euromap 82.2 makes almost all process-relevant parameters adjustable via the injection moulding machine operating unit. Therefore, as long as an injection moulding machine has Euromap 82.2 communication, pro CONTROL hot runner controllers with firmware version 4.2 or higher can be operated and read out by injection moulding machines true to specification. For all controllers with older firmware, a free update is available.

5.3.3.2.2 Device Group




Settings > Communication > Device Group

With the device group, several controllers can be connected to form a single unit. This allows all connected devices to be operated from one controller, so that several individual devices act like a single controller with a correspondingly higher number of zones.

As a prerequisite, the devices must be connected via Ethernet. This may also require additional peripherals such as a network switch. In this way, up to 360 zones can be interconnected.





Communication channel in the device group (optional setting)

	Note	The communication of the devices in the group works via UDP multi-cast address.
---	------	---


The communication channel defines the multicast address. The address is:
"224.0.[Communication channel setting].0"

Function	Description
Communication Channel	<p>If there are several device groups in the same network, they must communicate on different communication channels to ensure error-free operation. For this purpose, this channel must be set to the identical address on all participants of a device network before the network is started.</p> <p>Boundaries 0...255</p> <p>Factory setting: 1; if set to value "0", communication is disabled</p>

Start device group

1. Press the "Start device group"  button. Then enter the password for the administrator level.
2. Next, a list of all devices in the network is displayed. In addition to the serial number, the zone number of the respective controller is also displayed. The devices that are to be used for the group must be selected accordingly. Selected devices in this list show this via a circulating LED band.
3. The selection must then be confirmed via .
4. Subsequently, the device group must be confirmed by password at all selected participants.
5. In the subsequently displayed dialog on the operating unit, the order of the controllers can optionally be adjusted. This allows the individual controllers to be arranged using the arrow keys so that zone numbers are lined up one after the other accordingly. To conclude, confirm again with .
6. The operating unit now displays all zones of the controllers involved in the device group. The parameterization of all zones is now only carried out via this display.
7. The parameters can no longer be set on the operating displays of the connected devices. By pressing , only the LED display of the operating unit flashes, so that it makes it easy to find out the operating unit.

Cancel device group


The device group can be deactivated at the operating unit via . Subsequently, all controllers that were previously only operable as a group can be used again as a single unit.




Status messages in the group

When the device group is active, the status of all nodes is always displayed on the configuration page. The following states can occur:

Connection status	Description	Solution approach
OK	Connected	
Connection error	Connection to the respective subscriber is interrupted	Check if device is not switched on, network cable not plugged in or defective, network switch switched off or defective
Incompatible	Firmware version of the control unit is not compatible with the firmware of the paired controller	Update firmware of the affected controller
Configuration error	Connected controller operates as an individual controller, although it should be part of the device group	Deactivate device group on operating unit and restart

5.3.3.2.3 RS485




1.  2.  3. 

Settings > Communication > RS485

RS485 is the serial interface of the controller. This menu item contains the following setting options:





Function	Description
<p>RS485: Protocol</p>	<p>Defines the protocol type to be used for communication via RS485.</p> <p>Setting options: FE3BUS protocol for seamless logging of all process values and operation of all available parameters.</p> <p>ARBURG EUROMAP 17 → Protocol for coupling the controller to an ARBURG injection moulding machine, which in turn must have a serial interface to a hot runner controller. Some important process values (actual values, alarms) can be queried via a restricted EUROMAP17 protocol and the setpoints can be operated. This is usually done with a maximum of 9600 baud.</p> <p>FANUC Modbus → Protocol for coupling the controller to a FANUC injection moulding machine, which in turn must have a serial interface to a hot runner controller. Via the Modbus protocol, the most important process values (actual values, alarms, power and current) can be queried and the setpoints and alarm limits set.</p> <p>ENGEL / HB-Therm → Protocol for coupling the controller to an ENGEL injection moulding machine, which in turn must have a serial interface to a temperature control unit. This can be used to set setpoints and to query actual values and alarms.</p> <p>Factory setting: FE3BUS</p>
<p>Baudrate</p>	<p>This parameter sets the baudrate. The baudrate must be identical for the controller and the device to be connected, otherwise interference-free communication cannot be guaranteed.</p> <p>Setting options: 9600; 19200; 38400; 57600; 115000</p> <p>Factory setting: 19200</p>
<p>Address</p>	<p>To address the controller it is necessary to assign an address. To ensure trouble-free communication, the controller and the device to be connected must have different addresses.</p> <p>Setting limit: 1 ... 30</p> <p>Factory setting: 1</p>

 5.3.3.2.4 Digital Inputs



 Settings > Communication > Digital Inputs

 
The digital inputs of the controller can, for example, be controlled by a PLC with a 24 VDC signal. For each function, a distinction can be made between the following five control modes:

Control mode	Description
Input inactive	The input is inactive. Incoming signals are ignored and are not logged in the event list.
Level-controlled high-active 	As long as a signal (high level) is present at the digital input, the function remains activated. It cannot be deactivated via the user interface.
Level-controlled low-active 	As long as a signal (high level) is present at the digital input, the function remains deactivated. It cannot be activated via the user interface.
Edge-controlled high-active 	With every change at the digital input from 0V to signal (High) the function is switched over. This can be realized by a pulse of at least 100 ms. Thus the function can also be changed at any time via the user interface.
Edge-controlled low-active 	With every change at the digital input from signal (High) to 0V the function is switched over. This can be realized by a pulse of at least 100 ms. Thus the function can also be changed at any time via the user interface.

The following functions can be performed by the control inputs:



Function	Description
Boost (Digit-In, Pin 1)	The input allows machine controlled boosting. The function affects all zones that have a set boost duration and a boost offset greater than zero. Factory setting: Input inactive
Outputs On/Off (Digit-In, Pin 2)	The input permits machine-controlled switching of the outputs. Thus the heating process can be started and stopped by the digital input. Factory setting: Input inactive
Release Outputs (Digit-In, Pin 3)	The input permits machine-controlled output release. The controller outputs can be switched independently, but the controller only outputs power if the outputs are switched on and enabled via this digital input. Factory setting: Input inactive
Standby (Digit_In, Pin 4)	The input permits machine-controlled lowering to standby temperature. Factory setting: Level-controlled, high-active
Additional Heaters On/Off (Digit-In, Pin 9)	The input allows machine-controlled switching of additional heaters. Zones of group 8 are switched to control mode - or switched off. Therefore, in addition to this setting, the corresponding zones must be assigned to group 8 under "Quick start"(chapter 5.3.1.1.1). If zones are assigned to this group and the function is activated via the control input, the corresponding zones switch between "control mode" and "zone inactive". Factory setting: Input inactive

 5.3.3.2.5 Notification Contacts



Settings > Communication > Notification Contacts

The notification contacts are potential-free led out to the signaling socket on the back of the controller. Warnings and alarms can thus be communicated to an injection moulding system as a collective signal. Each contact can be configured as follows:

Configuration	Description
NC contact (fail-safe) 	<p>As a normally closed (NC) contact, the contact is normally closed and opens as soon as an alarm or warning is present.</p> <p>This behavior is fail safe, since each interruption of the connection also opens the circuit.</p>
NO contact 	<p>As a normally open (NO) contact, the contact is normally open and closes as soon as an alarm or warning is present.</p>

Depending on the configurations above, the following contacts can be set:






Function	Description
Contact 1: Warnings	<p>The signal contact 1 switches when a warning is signaled at at least one zone or when the LED band lights up yellow, e.g. in case of temperature deviation.</p> <p>Factory setting: Break contact (fail safe)</p>
Contact 2: Alarms	<p>The signal contact 2 switches when an alarm is signaled at at least one zone or the LED strip lights up red, e.g. in the event of a sensor break.</p> <p>Factory setting: Break contact (fail safe)</p>

5.3.3.3 Service

 - 
1. 
 2. 
 3. 

Settings > Device > Service

Service contains information and functions that are useful in the event of service case.

Function	Description
<p>Device info</p> 	<p>Device info lists the most important information on the device and also on the current software versions of the installed hardware.</p>
<p>Firmware update</p> 	<p>The firmware updates for the control unit and power unit in the controller can be carried out here. The update can be installed via a flash drive.</p> <p>A flash drive with the update program must be connected up for updates to the control device. The update process starts automatically.</p> <p>For updates of the power boards, a flash drive with the firmware must be inserted in the main directory and the device restarted. Then follow the instructions on the starting page.</p> <p>Once the update process is completed, the controller will start again.</p>
<p>Service File</p> 	<p>The service file contains technical data that are useful for support when analysing errors.</p> <p>A click on the icon in the left-hand side of the screen starts the saving process. The dialogue for selecting the target directory will appear. The target directory can be changed by pressing the arrow. After selecting the desired target directory, the process can be confirmed by pressing the tick, or cancelled with X. Successful compilation of the service file is indicated by a brief message at the bottom of the screen.</p>
<p>Support</p> 	<p>The support page contains the main contact data for support. A one-day password can also be requested here if the password has been forgotten. (See also: Settings > Device > User management) The login button for service personnel releases further details that are only available to service employees.</p>
<p>Factory Settings</p> 	<p>The controller can be reset using two different methods. If "Load default parameters" is selected, all the parameters will be reset to their default values. All files on the device, such as recipe files, protocols and screenshots are retained.</p> <p>If "Reset to factory setting" is selected, all the parameters will be reset to their default values and all files on the device will be deleted. This requires the user level "Administration" or higher.</p> <p>In both cases, a dialog will appear for entering the corresponding password.</p>

5.4 Index



1.



Index

The index contains all the important keywords with a brief explanation and makes it possible to navigate, with a single click, to the page on which the settings are made.

There are two ways to find the term being searched for. The alphabetical list can be scrolled by pressing the rectangle at the right edge of the screen and moving it up or down. Or, the first letter of the term being searched can be clicked beneath the menu bar (A to Z).

If the terms marked in colour are clicked, these will lead directly to the menu page where the settings for this term can be made. Terms in white are not navigable but serve solely as explanations.

5.5 Switch all outputs on and off



In the menu bar

A longer press on the arrow button will start the heating process by activating the controller outputs. Zones in the “Inactive mode” operating mode will remain switched off. When the outputs are activated, the internal relays will close and the output level will be output at the corresponding contacts.



In the menu bar

After activating the On/Off button, the color of the icon and the background changes. This indicates that the outputs are active.

The On/Off button must be pressed to deactivate the outputs. The icon appears again without a coloured background.

5.6 Standby operation



In the menu bar

When the outputs are switched on (see above), pressing the standby button for a longer period of time will initiate the temperature reduction mode in which the temperature of all zones in control mode are reduced to the specified standby temperature.

“Standby” is displayed in the zone designation and the setpoint value for standby appears in the setpoint display.

The value of the standby temperature can be set individually in Setup > Quick start > Setpoint values.



In the menu bar


During standby, the standby button changes and is displayed with a colored background. If you press it again, the standby mode is cancelled and the standby button reappears with a white background.

6 Technical data

Operation and display	7" touchscreen (table top housing) or 10" touchscreen (tower housing) integrated or external 15" monitor (table top housing) or 19" monitor (tower housing)
Housing	
Housing material	Galvanised steel
Protection type	IP 20
Environmental conditions	
Operation temperature	0...50°C
Humidity	0...90% rel. humidity, no condensation
Storage temperature	-25...+75 °C
Mains supply	
Supply voltage	3x 400 V AC, N, PE
Switchable to	3x 230 V AC, PE
Tolerance	+ 10% / -15%
Power consumption <small>when idle</small>	7 W + 5 W per power board
Control voltage	
Internal control voltage	+24VDC
Protection	1 x 2A medium delay (5 x 20mm)
Thermocouple inputs	
Thermocouple	FeCuNi (TYPE J) 0...700° switchable to: NiCr-Ni (TYPE K) 0...700°
Cold junction compensation	Integrated
Resolution	0.1 K
Accuracy	+/- 0,25K
Load outputs	Bistable, electrically insulated
per zone	1x heating, 230V AC switching
Control time (phase angle /pulse package)	10 ms at 50 Hz – 8.3 ms at 60 Hz
Current per zone	max. 16 A with 80% switch-on duration per zone
Caution: observe the total load capacity of the electrical connection cable	
Minimum load	100 W
Signal shape	Pulse operation/phase control (automatic or manual selection)
Protection	2-pole; 6.3 x 32 mm Internal: SIBA TYPE 16A T External SIBA TYPE 16A gRL Only use these fuse types!
Alarm notification outputs	
3x relay contact	Potential-free for max. 250 VAC
Maximum current	4 A for $\cos\varphi = 1$; 2A for $\cos\varphi = 0.5$
Digital inputs	
Insulated, potential-free	16 – 30 V DC
Data interfaces	
Ethernet	CAT 5
RS485	D-SUB 9-pole
USB	USB 3.0 Standard


7 Dimensions

7.1 12 zone controller

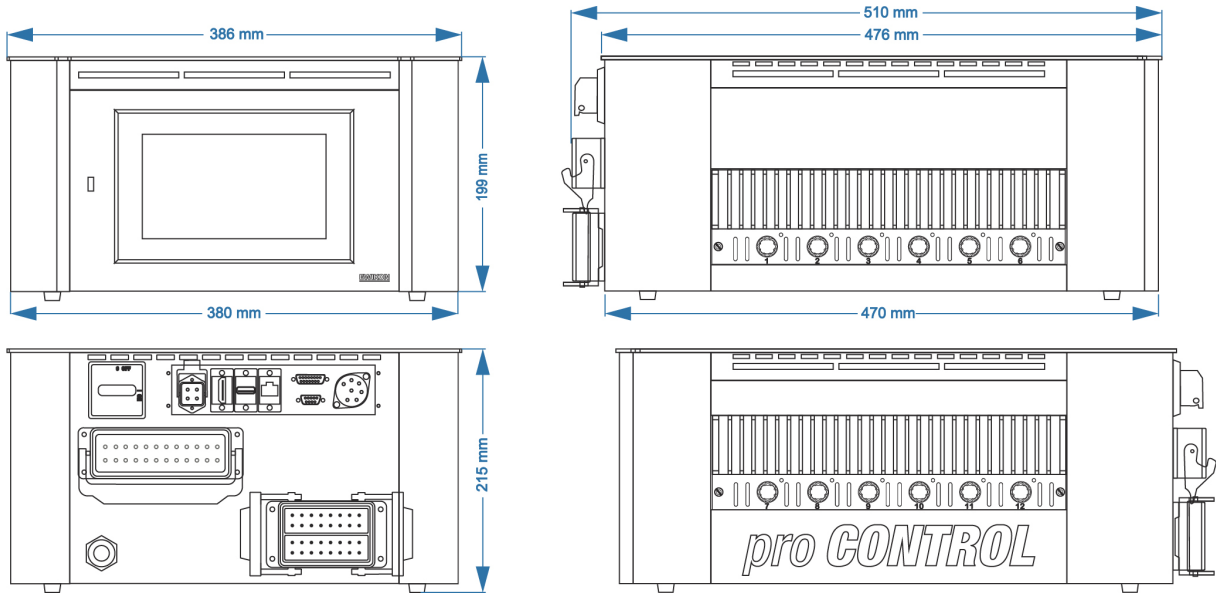


Plug: example

7.2 24 zone controller

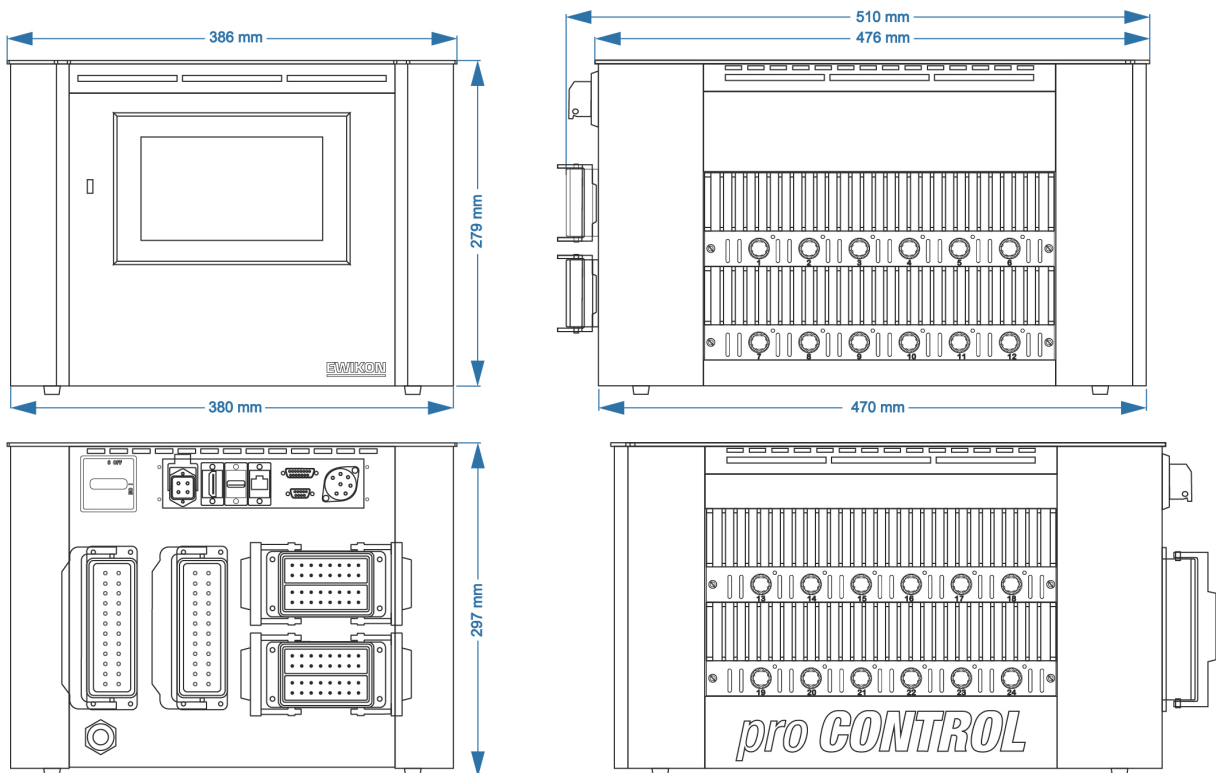





Plug: example

7.3 36 zone controller

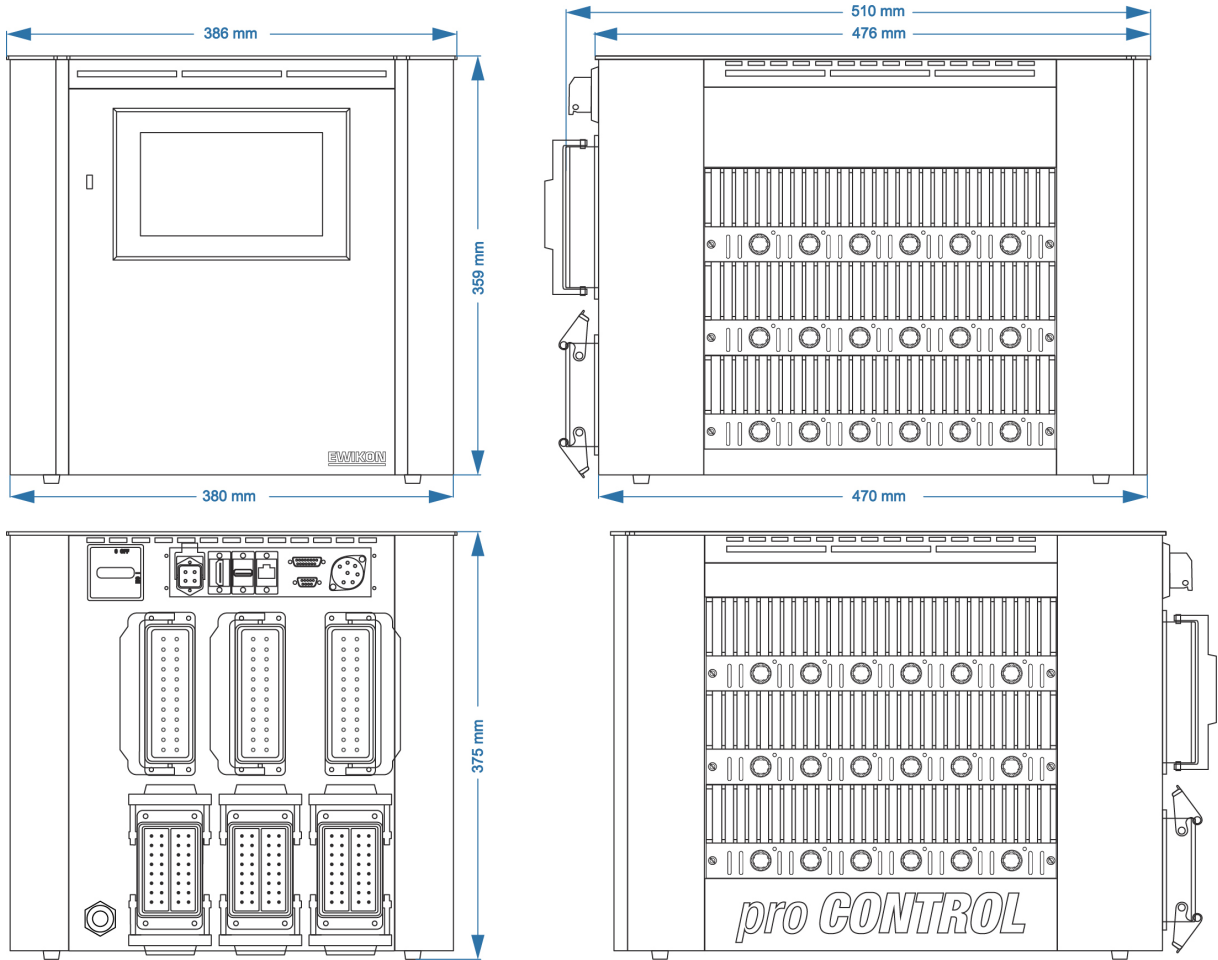

Plug: example

7.4 120 zone controller

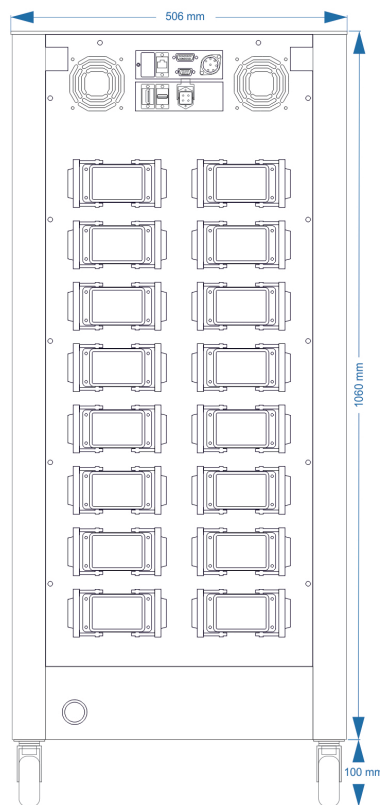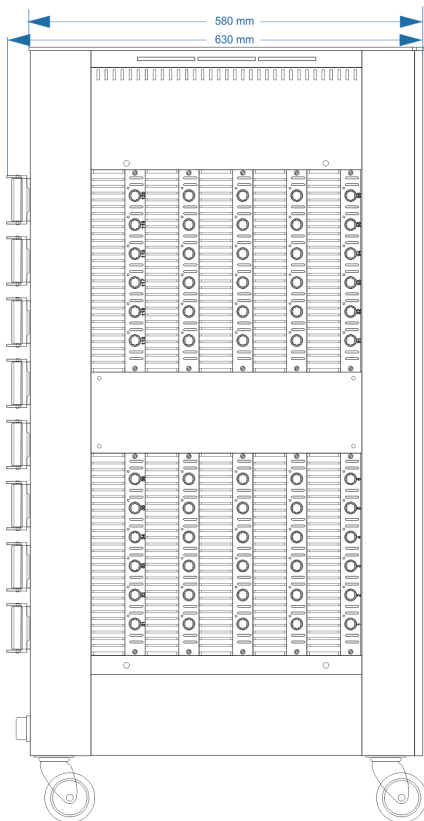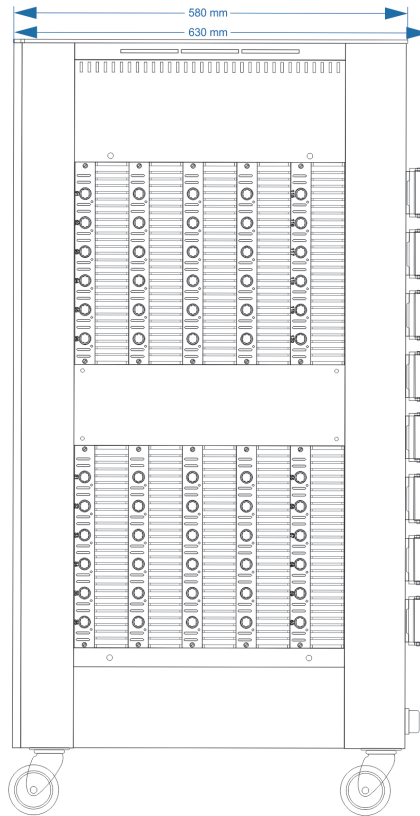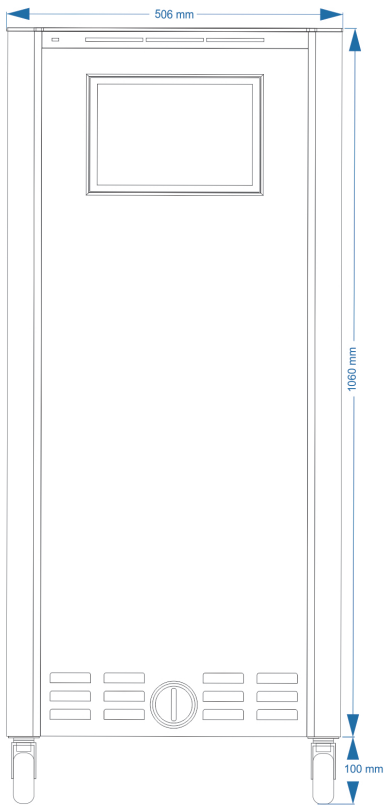

8 Appendix

8.1 Terminal bridges for the star-delta supply

8.1.1 Terminal bridges in star supply network (status as delivered)

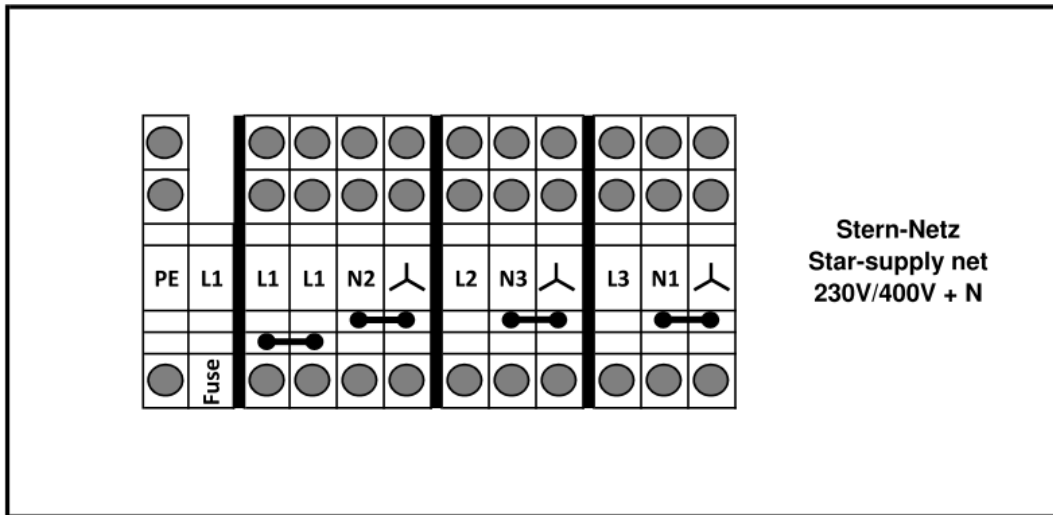


Figure 15 - Star supply

8.1.2 Terminal bridges in delta supply network


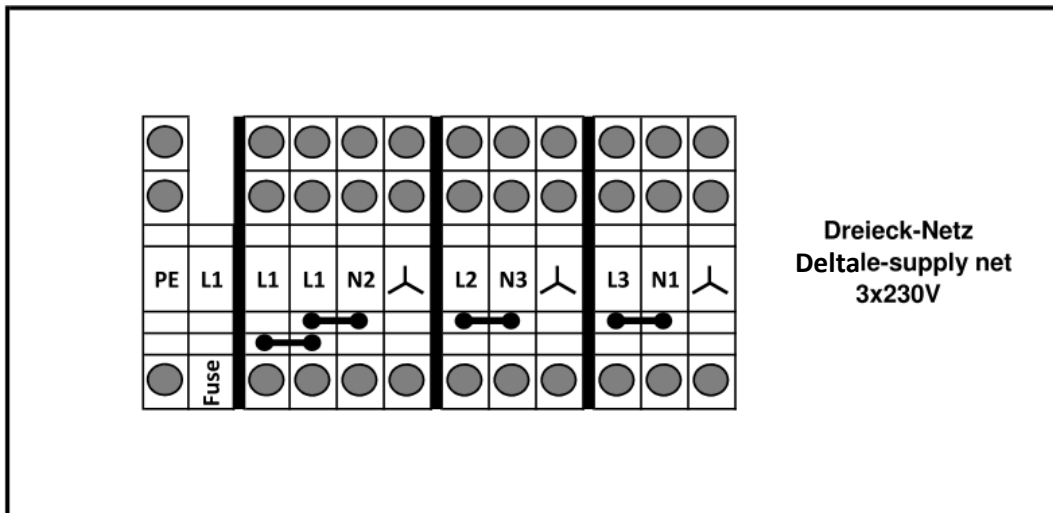


Figure 16 – Delta supply


8.2 Pin assignment alarm socket

Table 1 Alarm socket	Function	
1 + 3	Collective warning	Break contact (fail-safe)
4 + 5	Collective alarm	Break contact (fail-safe)
2 + 6	No function	

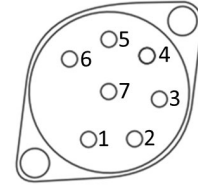

8.3 Pin assignment digital inputs


Table 2 Digital input	Function	
1	Boost	+24VDC
2	Outputs On/Off	+24VDC
3	Release Outputs	+24VDC
4	Standby	+24VDC
5	No function	
6 – 8		0VDC
9 – 15	No function	

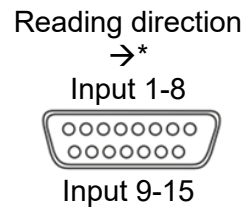

* The individual pins are also marked on the plug.

8.4 Pin assignment RS485

Table 3 RS485	Function
2	Rx/Tx+
3	Rx/Tx-

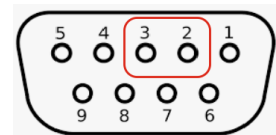

9 Index

Additional Heaters 55

Administration 47
Alarm socket 65
Alerting 42
All Parameter 43
Boost 20, 34, 55
Broken sensor 22
BSB 29
Chart Recorder 39
Communication 49
Communication Channel 51
Control dynamics 40
Control mode 19
Control quality 31
Cooling limit 25
Copy file 48
Current deviation 37
D component 40
Date / Time 45
Defective fuse 38
Defective triac 38
Delete file 48
Delta supply 64
Deviation, graphic 31
Diagnostics 35
Digital Inputs 54, 65
Dimension 61
Display 8, 30
Ethernet 49
Euromap 82.2 49
Events 35
External touch monitor 10
Fault current 37
Fault handling 35, 36, 46
File Management 48
Fuse defective 42
Groups 15, 18, 21
Heating 25
Heating current 24
Heating signal 41
Heating timer 45
High temperature limit 21
I component 40
Index 58
Internal bus error 38
Internal setpoint 31
Language 44
LED-Band 8

Load Detection 42

Load short circuit 38
Low temperature 38
Low temperature limit 22
Main view 28
Manual mode 19
Mean output level 31
Mold check 26
Mold Check Timeout 27
Monitoring 20
Monitoring mode 19
Move file 48
Navigation bar 14
Navigation menu 16
Negative temperature deviation 37
Notification Contacts 55
Offset 22
OPC UA 49
Operating mode 18
Operation 13, 19, 28
Optimizing 29
Output level 23, 27
Output level deviation 37
Overload Detection 42
P component 40
Parameter 43
Positive temperature deviation 37
Quick start 13, 17
Ramp gradient 26
Recipe 13, 43
Reference Mode 19
Reference zone 22
Relay fault 38
Rename file 48
RS485 52
Safety instructions 5
Sensor break 37
Sensor polarity 38
Sensor type 27
Sensor voltage 37
Sequential heating priority 25
Service 56
Setpoint value 19
Settings 44
Setup 17
Softstart 26
Standby 20, 55
Star supply 64

Star-Delta	64	Temperature Unit	44
Start menu	13	Tolerance range	21
Start screen	13	Troubleshooting	35, 47
Structure	6	Type plate	10
Switch-off temperature	37	Update	57
System fault	38	User management	46
Technical data	60	Warnings	37
Temperature deviation	31	Zone inactive	19
Temperature difference	25		

We hereby confirm that the products described below conform to the essential protection requirements of the following European Directives

2014/35/EC “Low Voltage Directive”

and

2014/30/EC “EMC Directive”

with respect to their design type. This requires that the products are used for their intended purpose, that the assembly and operating instructions are observed and that genuine connecting cables outside the device are used.

Alterations made to the product will void the declaration of conformity.

Producer: EWIKON Heißkanalsysteme GmbH
Siegener Straße 35
35066 Frankenberg / Germany
phone: +49 (0) 6451 / 501-0

Product: **pro CONTROL hot runner controllers
for the operation of 230 V hot runner systems**

Type: Controllers for
2 / 6 zones
69400.002 / .006

Controllers for
6 / 12 zones
69510.006 / .012
69511.006 / .012

Controllers for
18 / 24 zones
69520.018 / .024
69521.018 / .024

Controllers for
30 / 36 zones
69530.030 / .036
69531.030 / .036

Controllers for
36 - 120 zones
69550.036 - .120
69551.036 - .120

Applied harmonised standards:

DIN EN 61010-1:2011-07

Safety requirements for electrical equipment for measurement, control and laboratory use

DIN EN 61326-1:2013-07

Electrical equipment for measurement, control and laboratory use - EMC requirements

Frankenberg, 14 November 2019



Dr. Stefan Eimeke
Managing Director

EWIKON
Heißkanalsysteme GmbH
Siegener Straße 35
35066 Frankenberg
Tel: +49 6451 / 501-0
Fax: +49 6451 / 501 202
E-mail: info@ewikon.com
www.ewikon.com

Item no: 18405E All rights reserved including errors and content and technical changes. EWIKON 09/2021

EWIKON